

Sense shower seats




Installation instruction

17414


17413

17414


17412

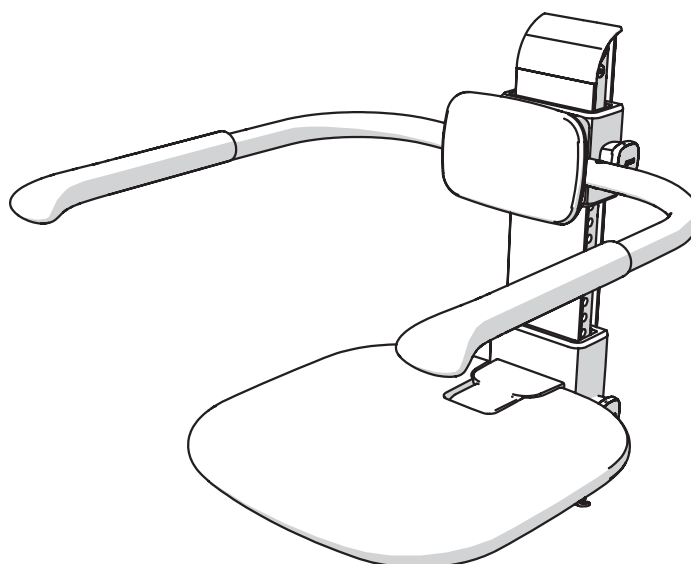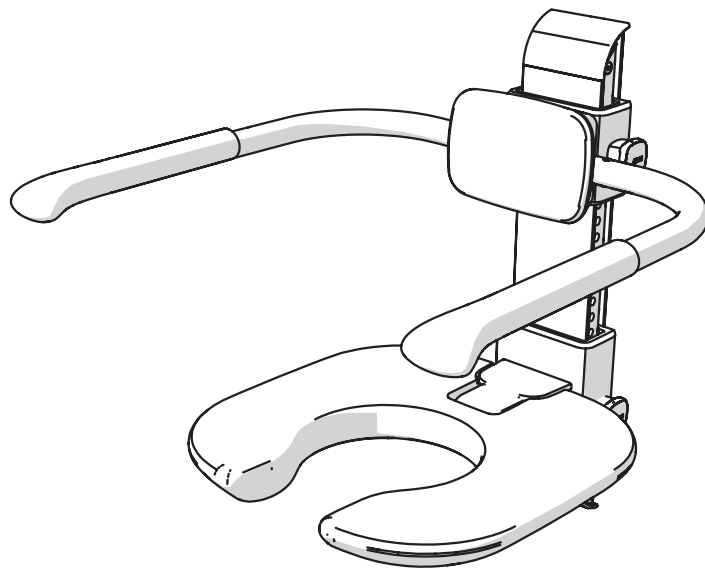

17414
17413

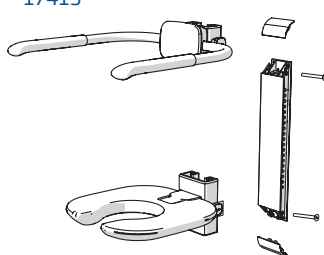

17414
17412

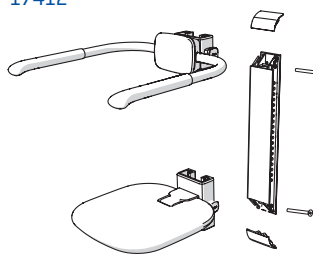

6219-Z

x8
x8
x8
8x60 mm



> korpinen.com



