

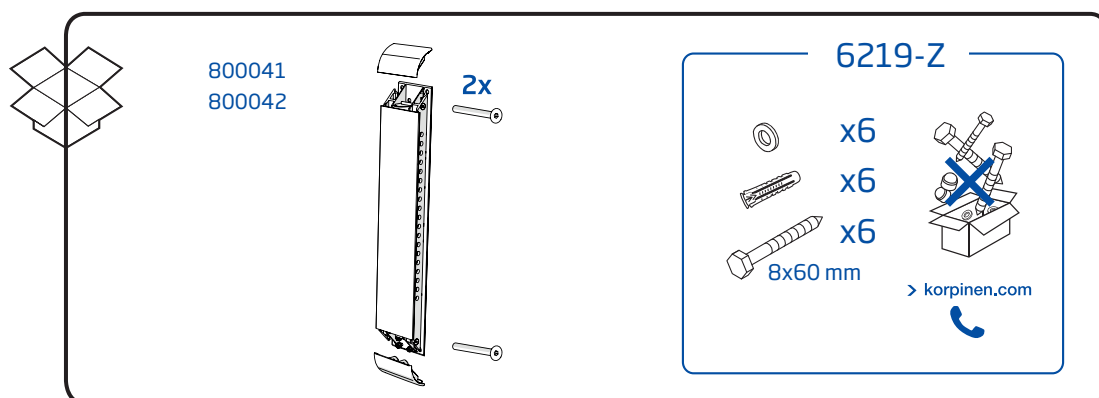


Sense shower seats


Reserve installation instruction

800041
800042


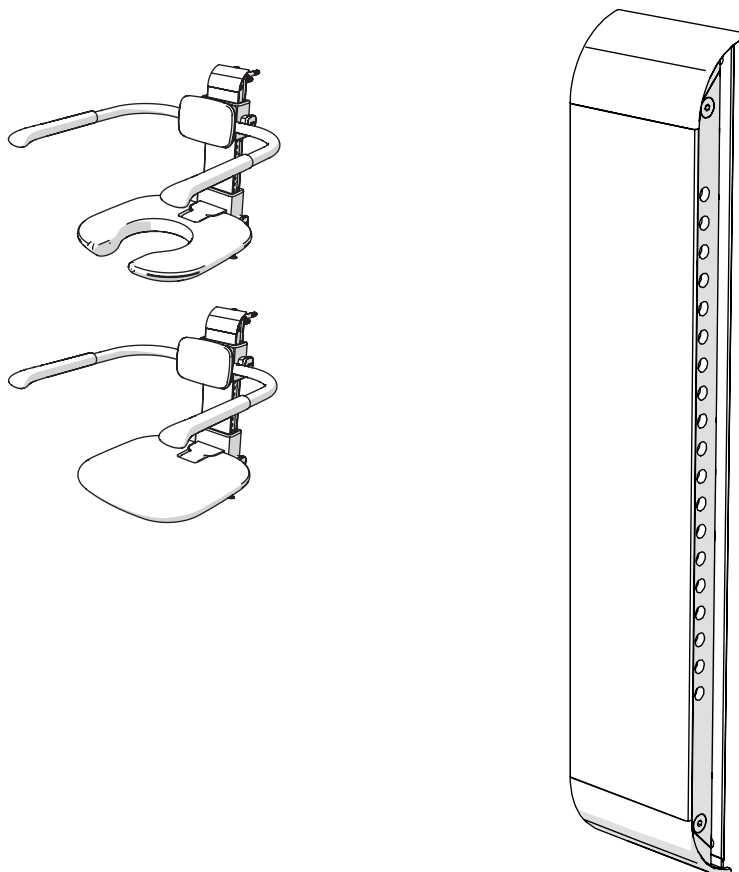


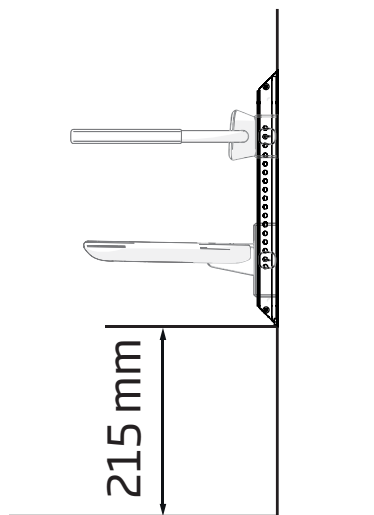



A

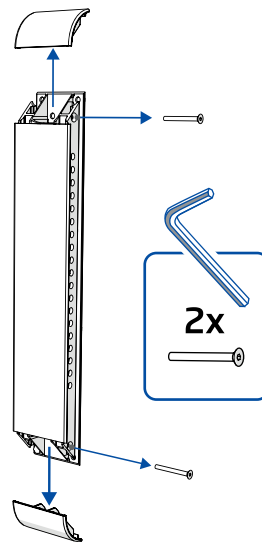


B

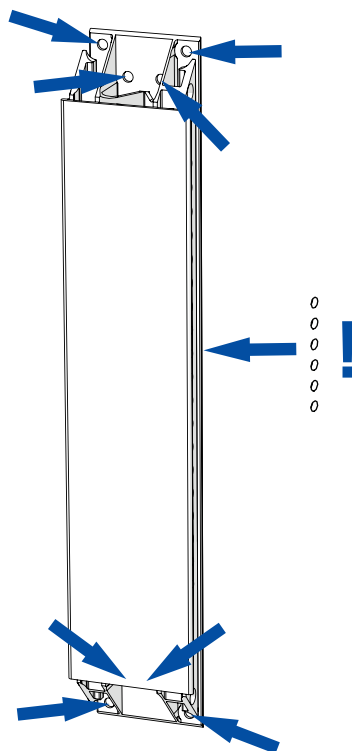

C

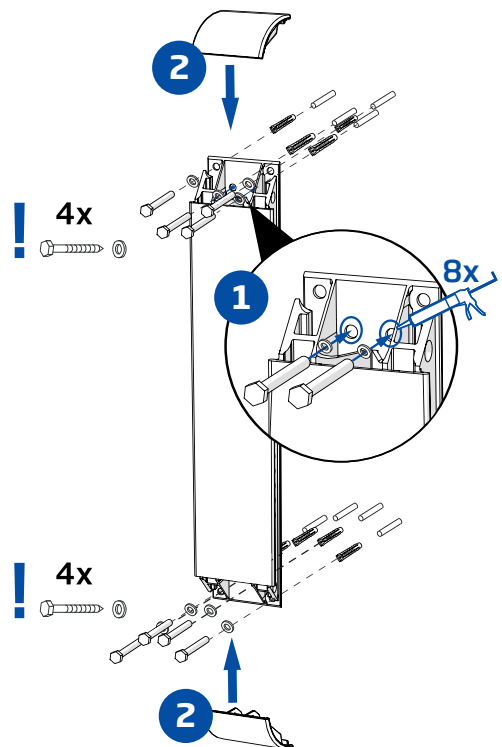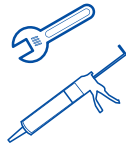

D

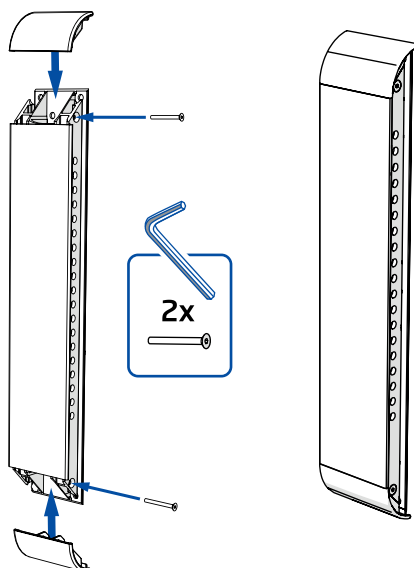

EXTRA STRENGTHEN

