

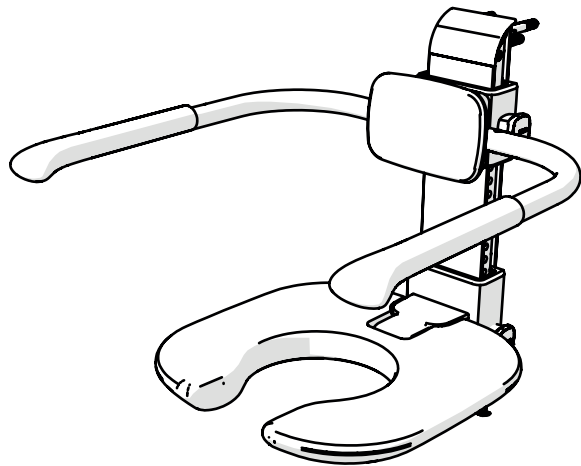
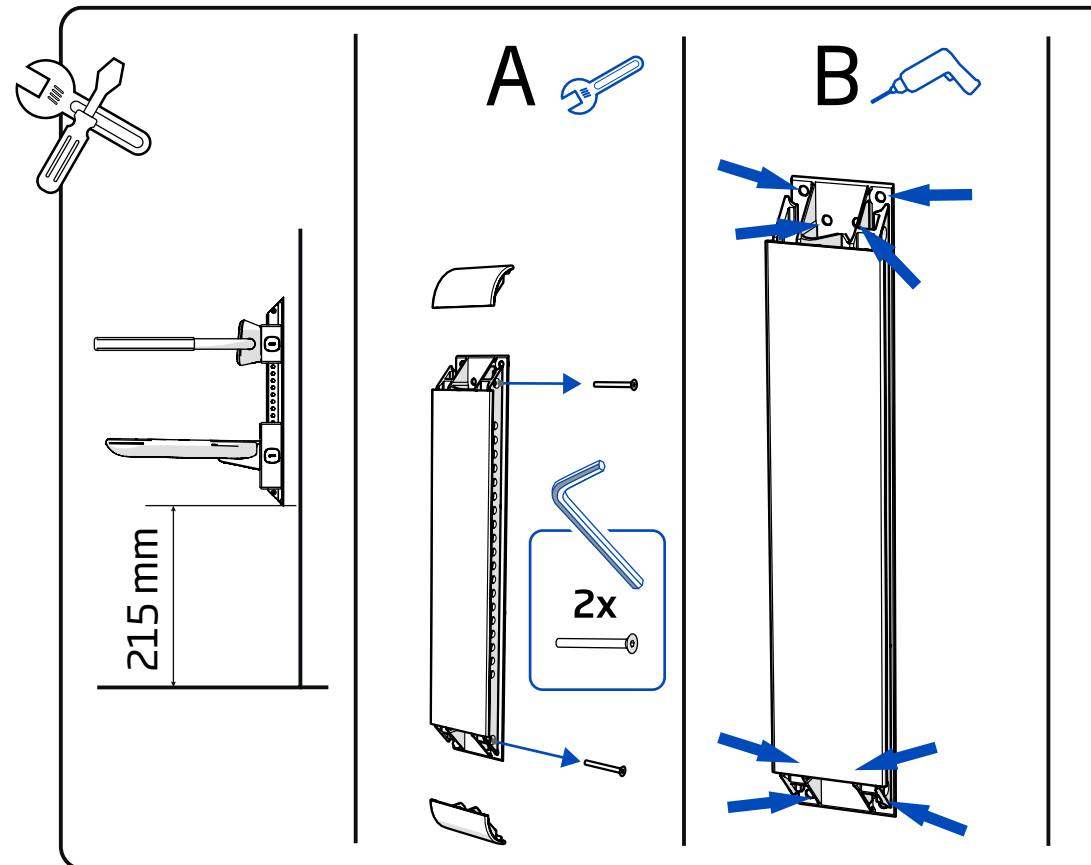


# Sense Shower seats

17406  
17407

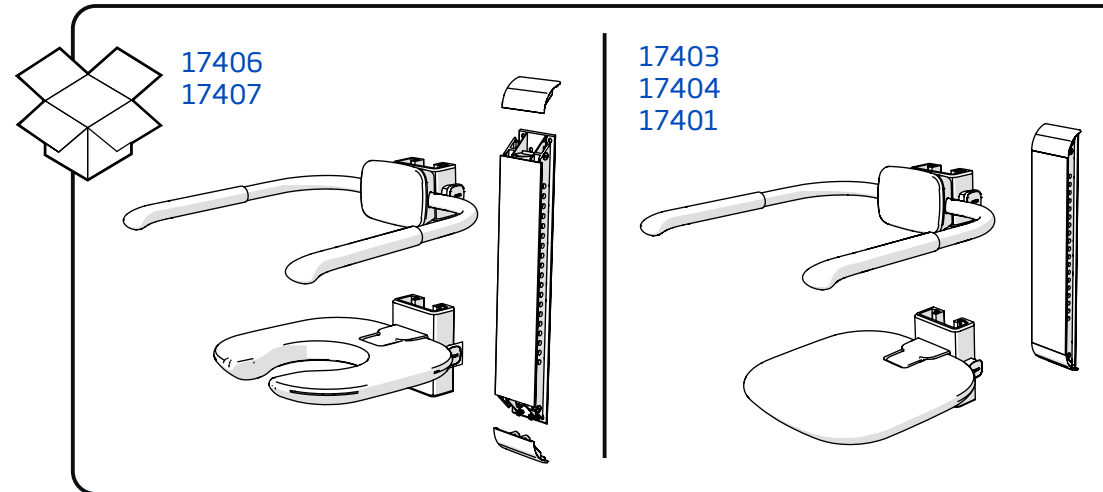

17403  
17404  
17401

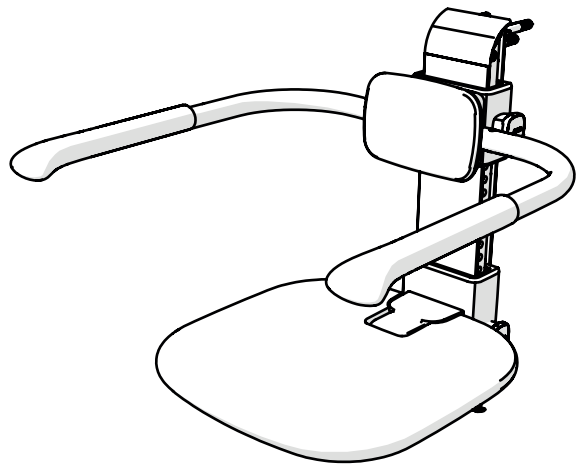

6219-Z



8x60mm x8

x8


x8

2x


> [korpinen.com](http://korpinen.com)

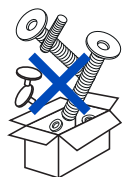


φ 7 mm  
60 mm

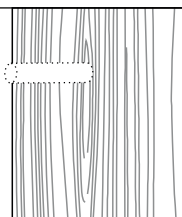


φ 10 mm  
60 mm

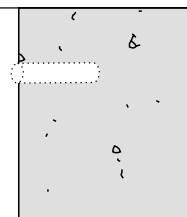

φ 10 mm  
60 mm

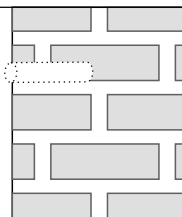


φ 10 mm  
60 mm

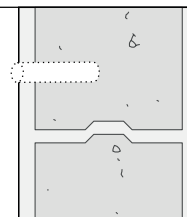


C



2x

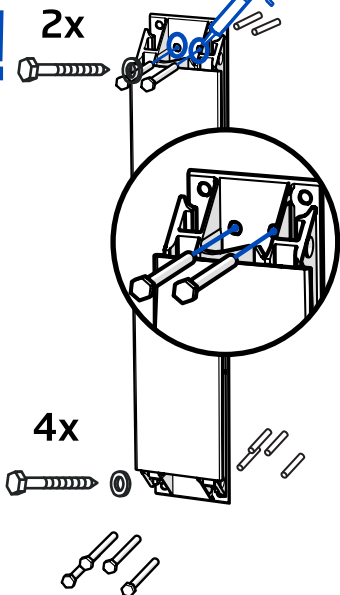


D

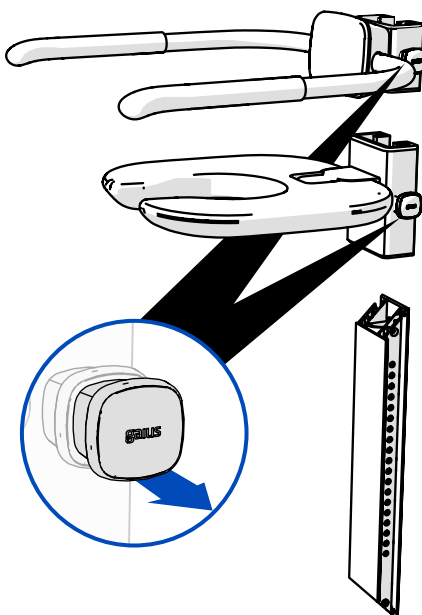

E



2x



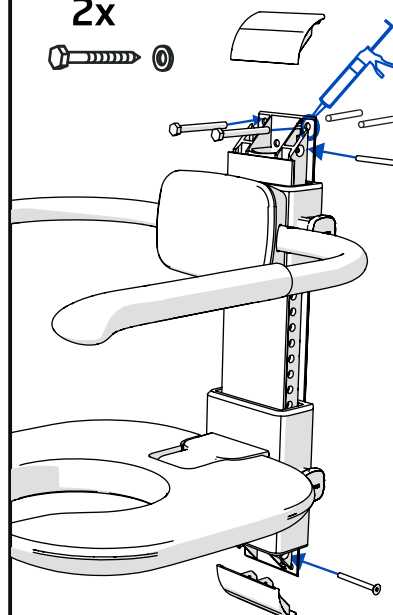


φ10 mm  
75 mm



710 mm

215 mm

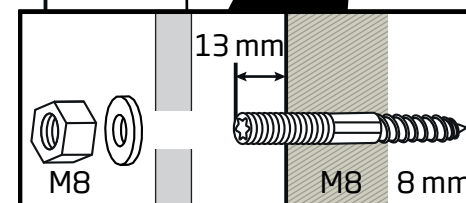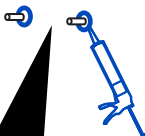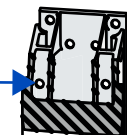

13 mm

M8

M8 8 mm