
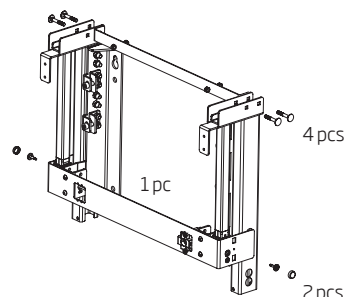
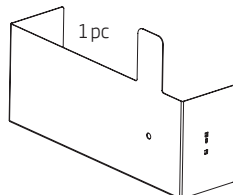
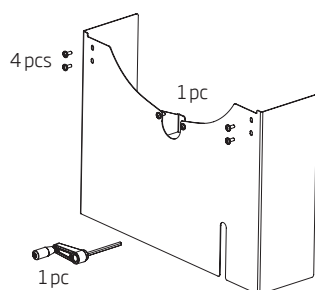

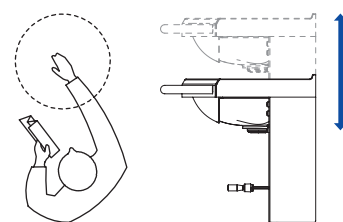


# Senior basin with crank

## 6238.4

### INSTALLATION INSTRUCTIONS

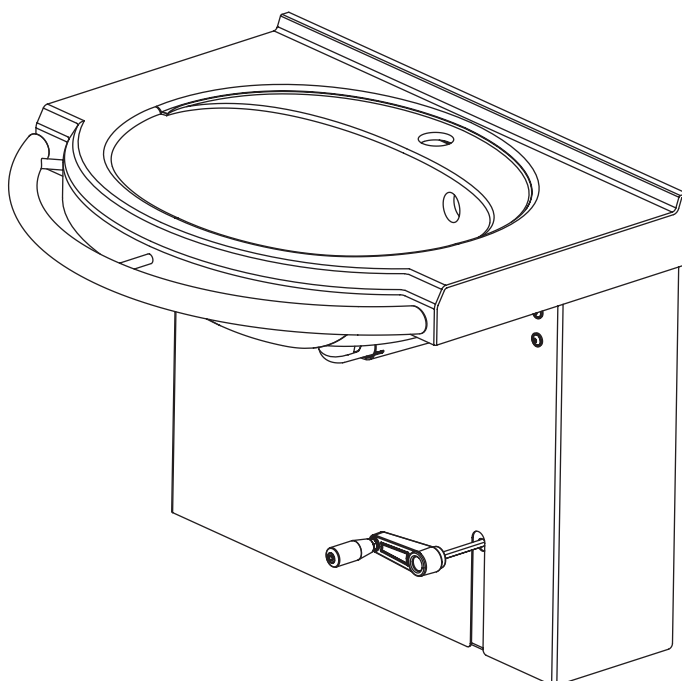


#### Tap / Hana



Oras Medipro  
5510A  
5510B



#### Parts

Cut-off valve 10 mm x G1/2  
Fastener


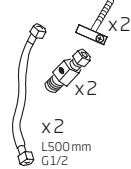


x2  
L500 mm  
G1/2


#### 6208-Z



#### 13982




x1




x1

The installer must be a professional.


Reinforce area

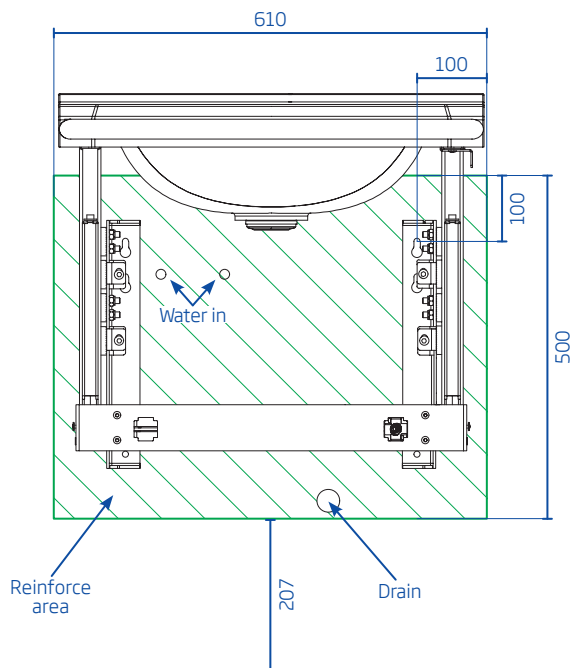


Water and drain places, frame installation measures

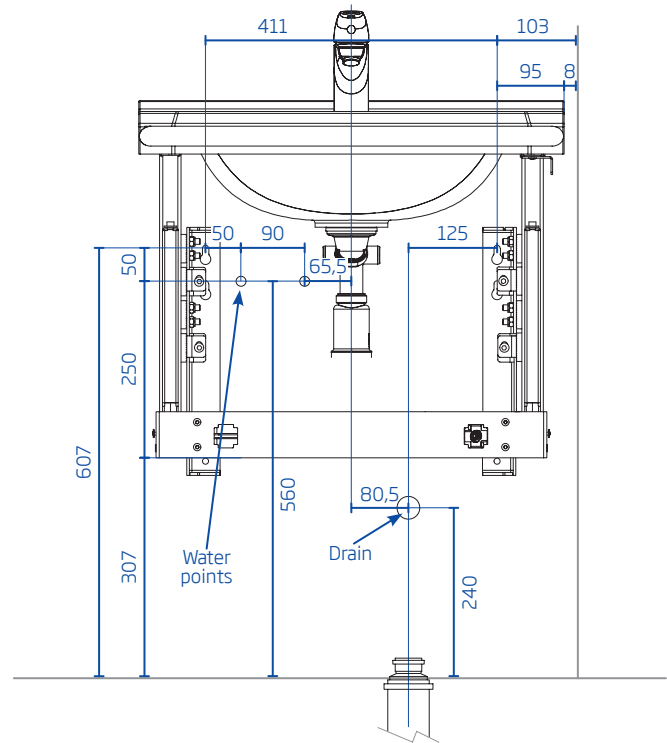

Water and drain pipes

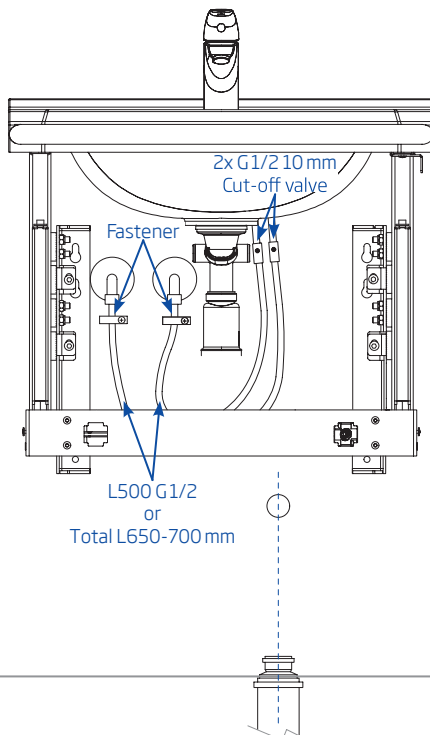


Outfit

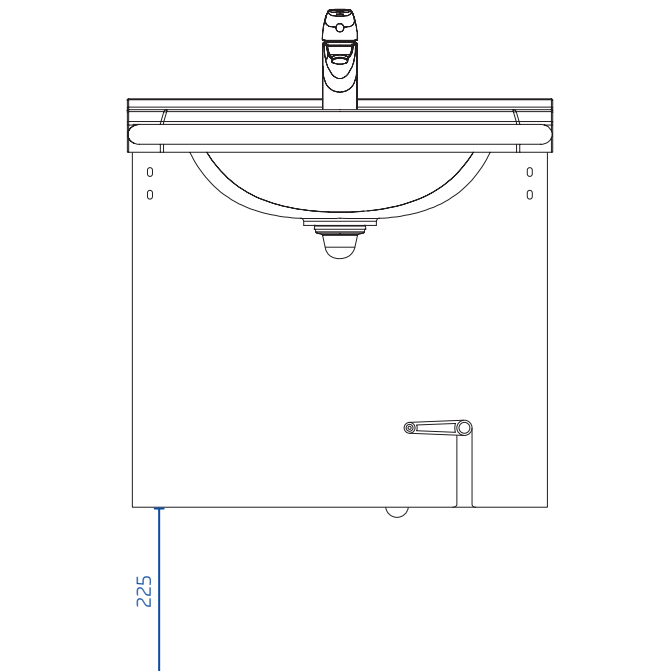


The installer must be a professional.


A

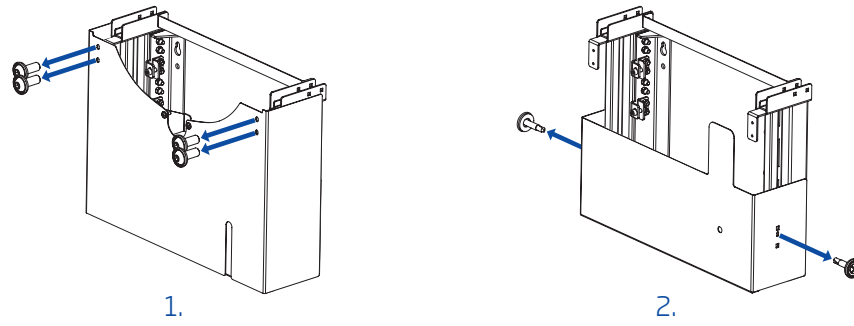

A1

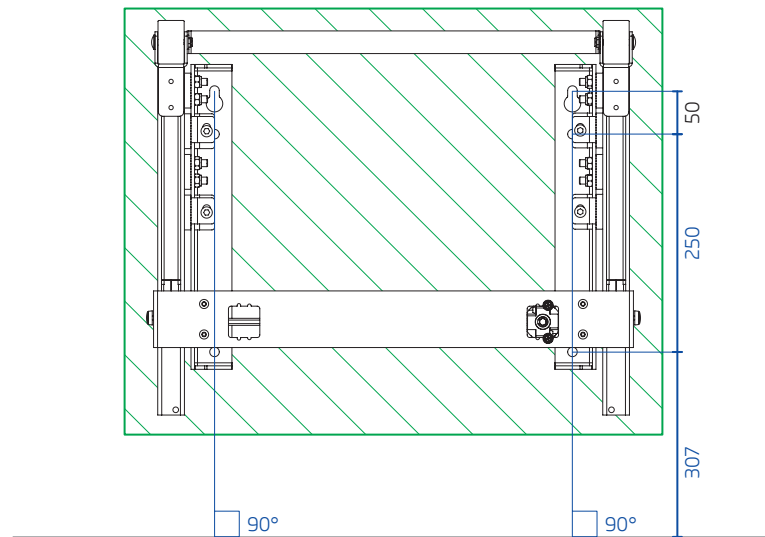


A2

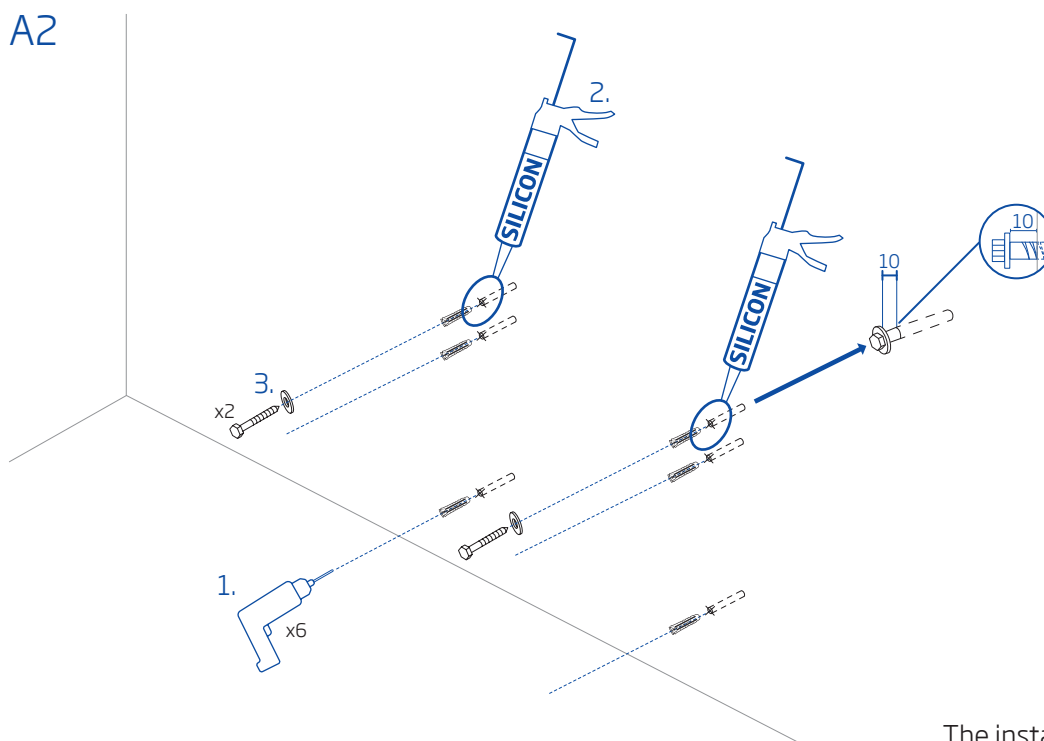


The installer must be a professional.


A3

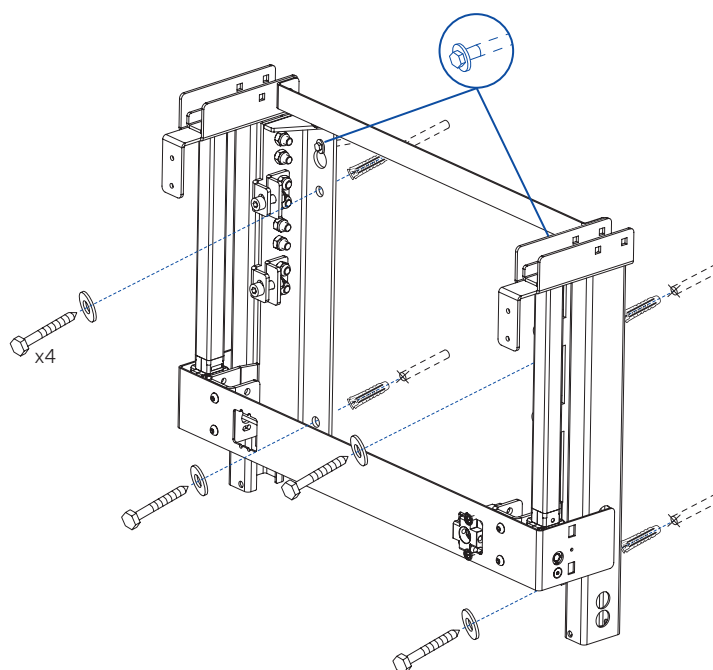

A4

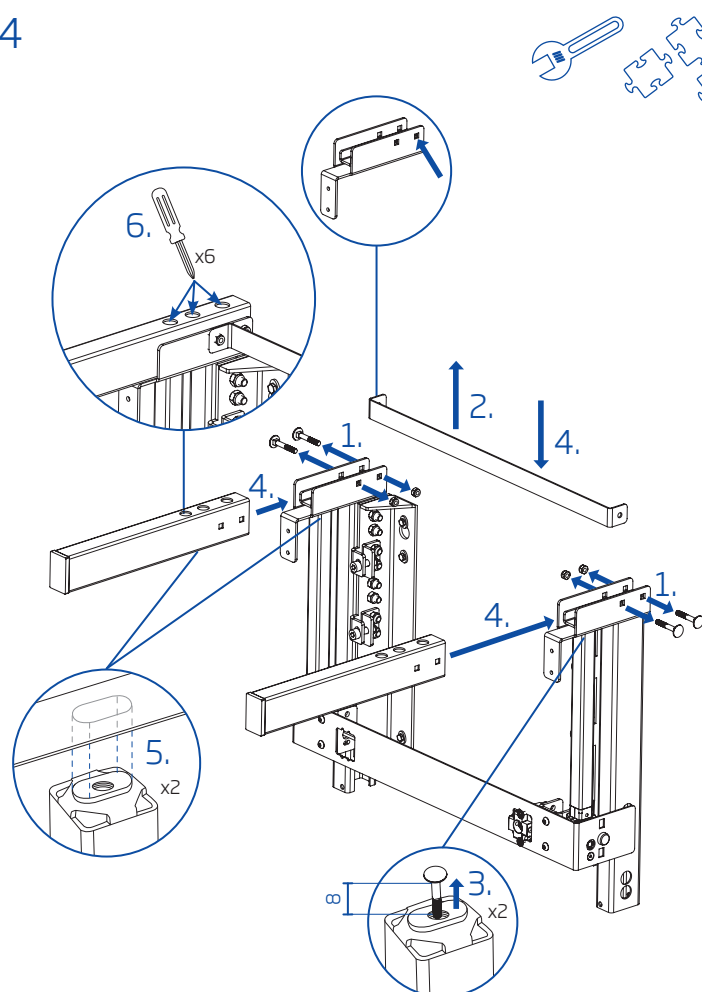


A5

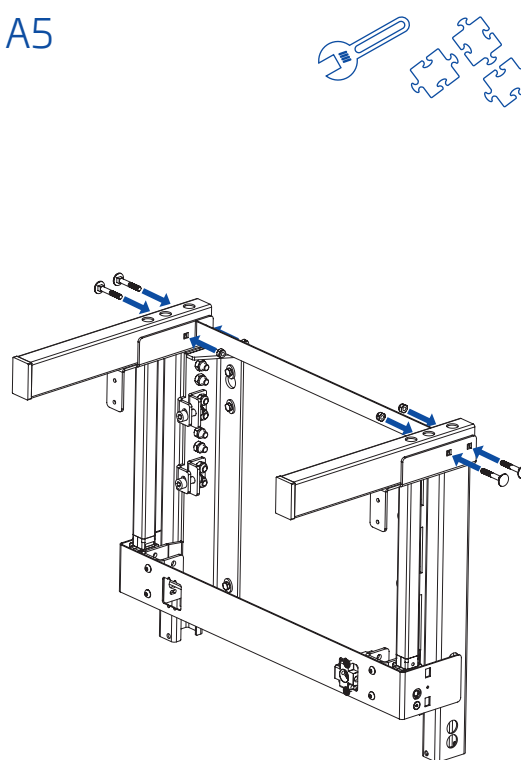

The installer must be a professional.



A6

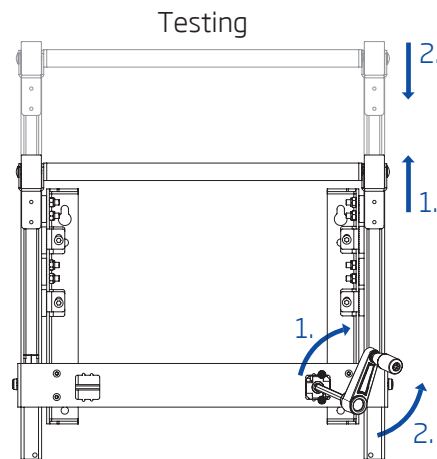

✓ Continue to step A7

✗ Check steps A3-A5





A7

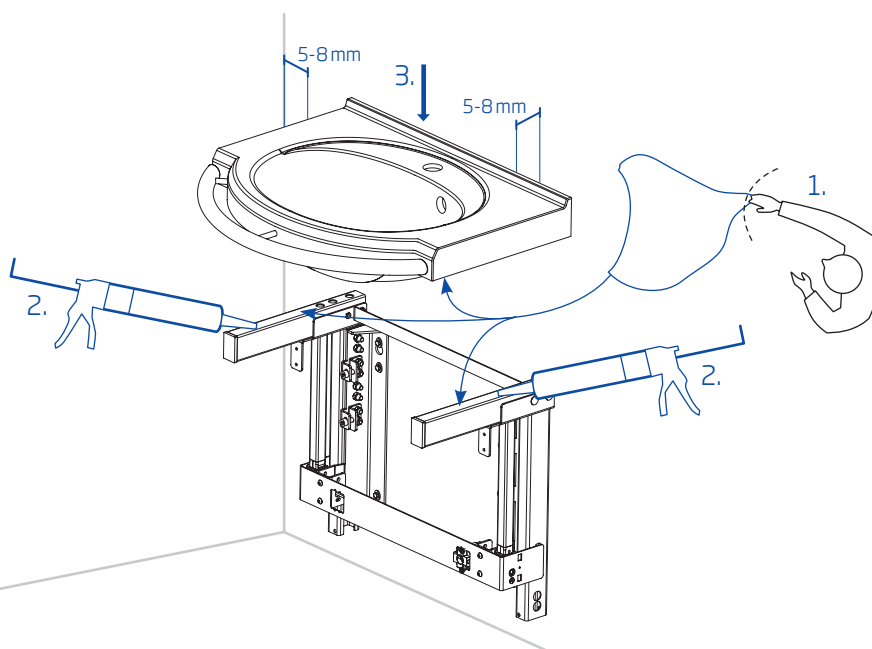

Sikaflex 11 FC

⌚ 24 h



B1

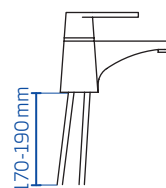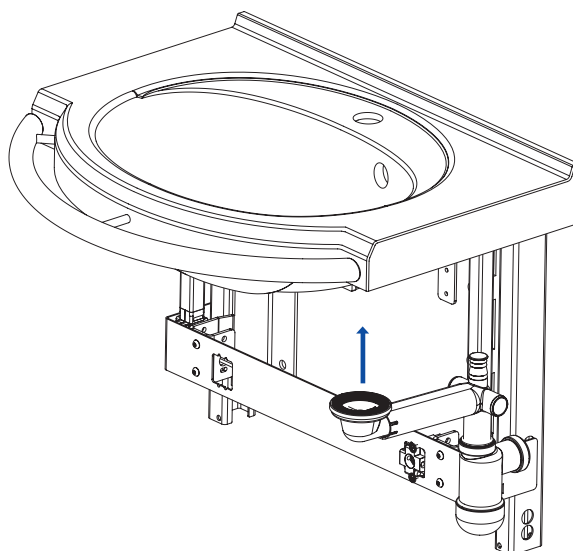


> [korpinen.com](https://www.korpinen.com/downloads/documents/Gaius_water_trap-2018.pdf)  
https://www.korpinen.com/downloads/documents/Gaius\_water\_trap-2018.pdf

The installer must be a professional.


B2

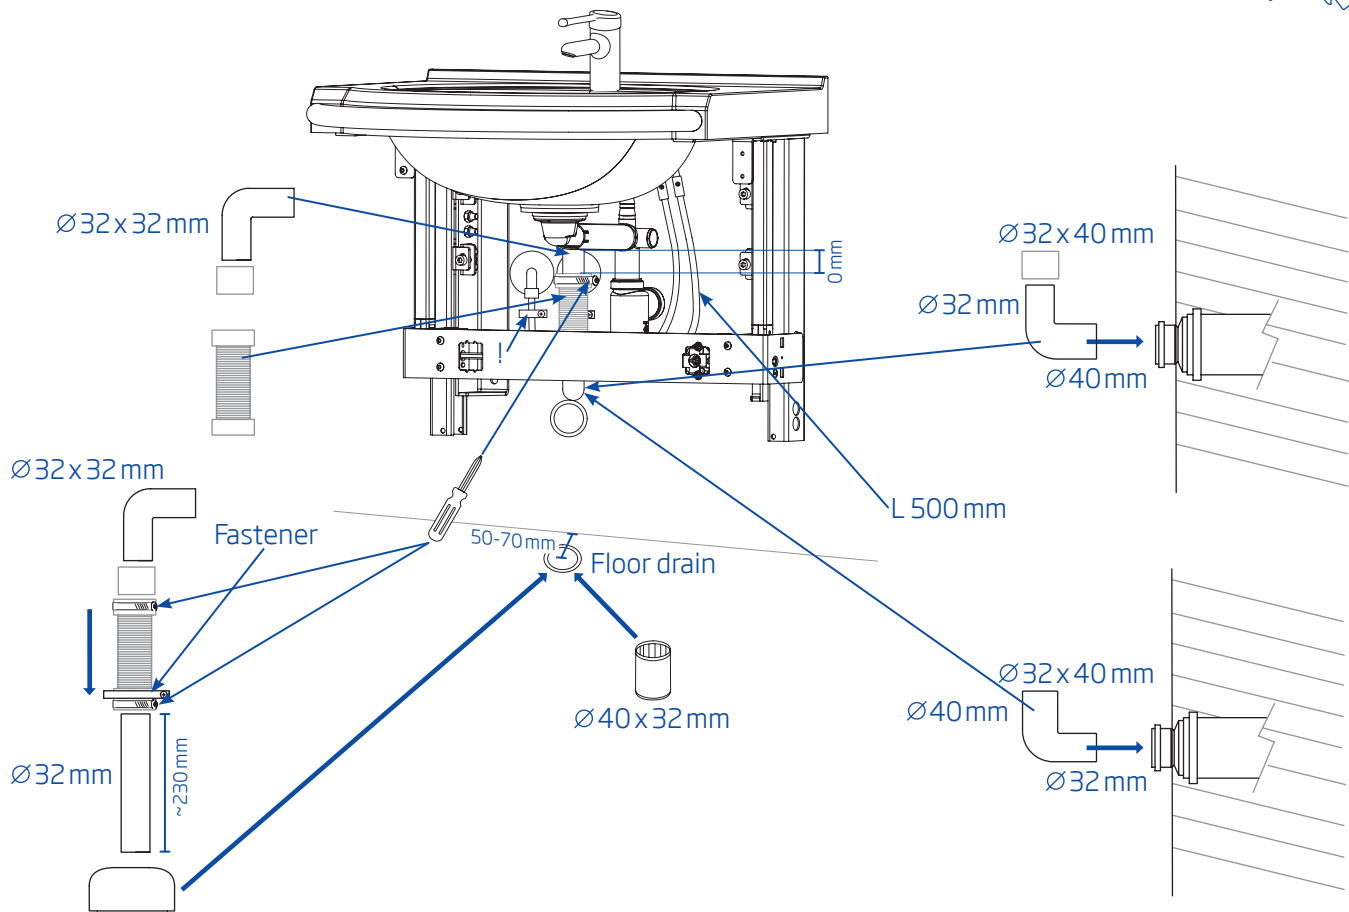

C1




A.

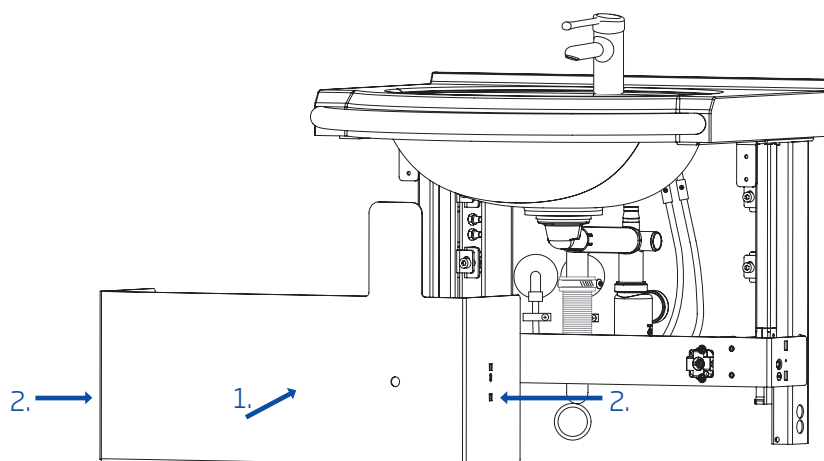


The installer must be a professional.


C2



B.

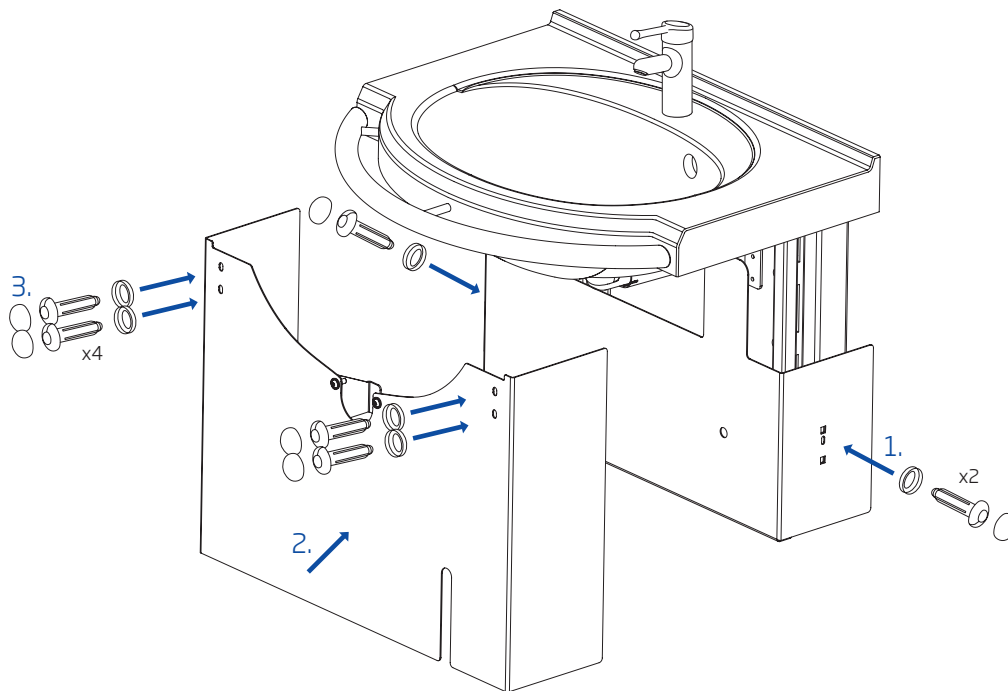

C.

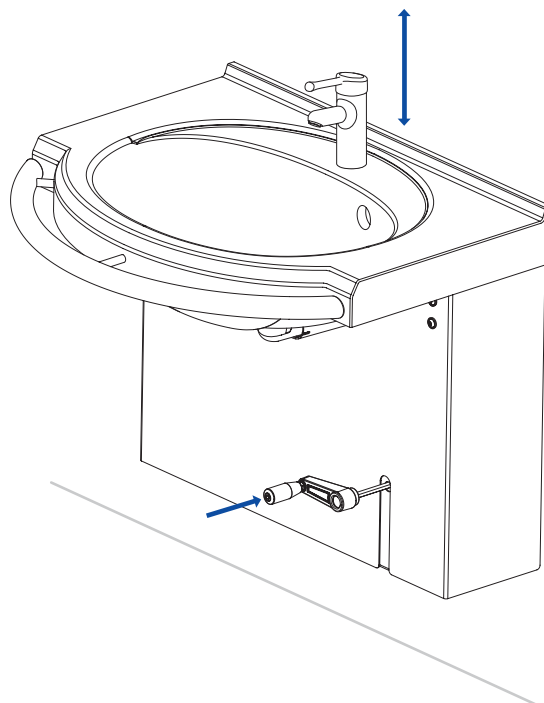

The installer must be a professional.