

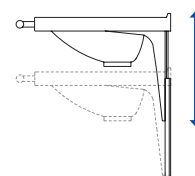






Sense basin with crank

6243.4L

INSTALLATION INSTRUCTIONS

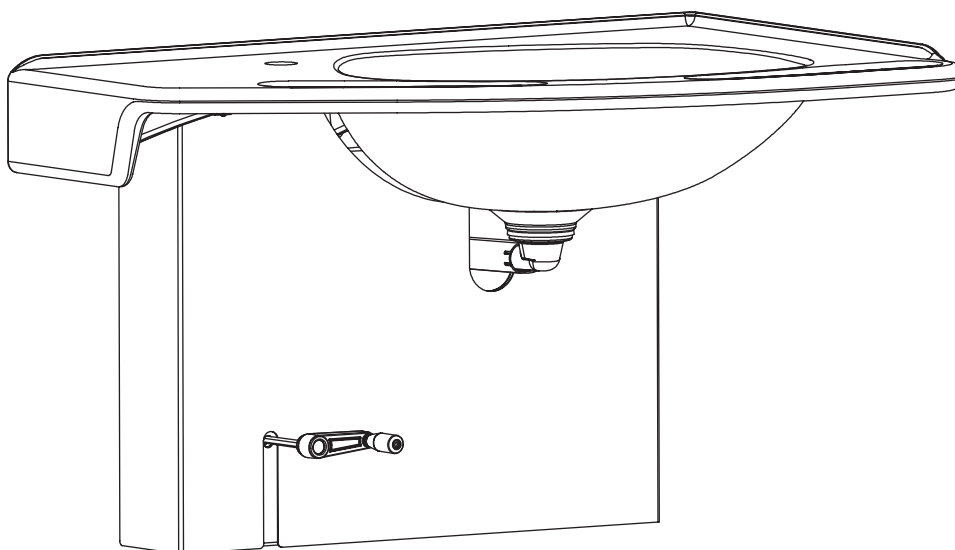


(Basin not included)

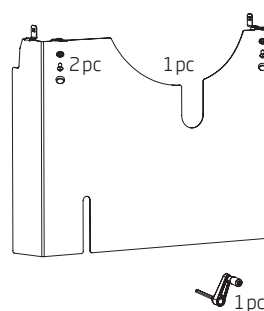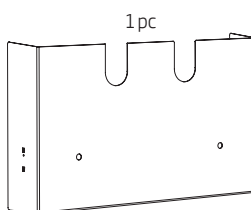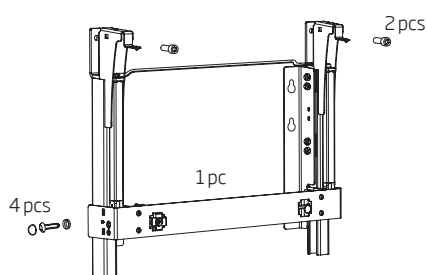

Tap





Oras Medipro
5510A
5510B

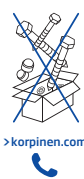

> korpinen.com

13970

Cut-off valve 10 mm x G1/2
Fastener

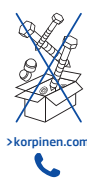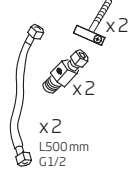

> korpinen.com

6208-Z




> korpinen.com

13983



> korpinen.com


13982

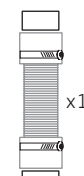


> korpinen.com

The installer must be a professional.


Outfit

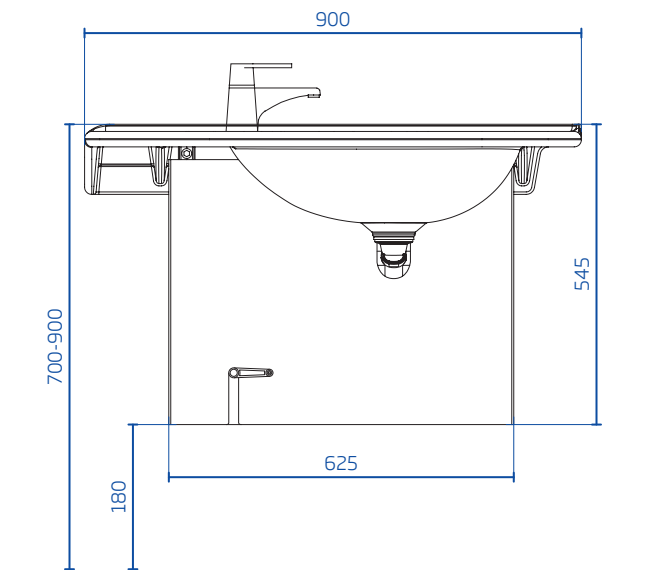


Reinforce area

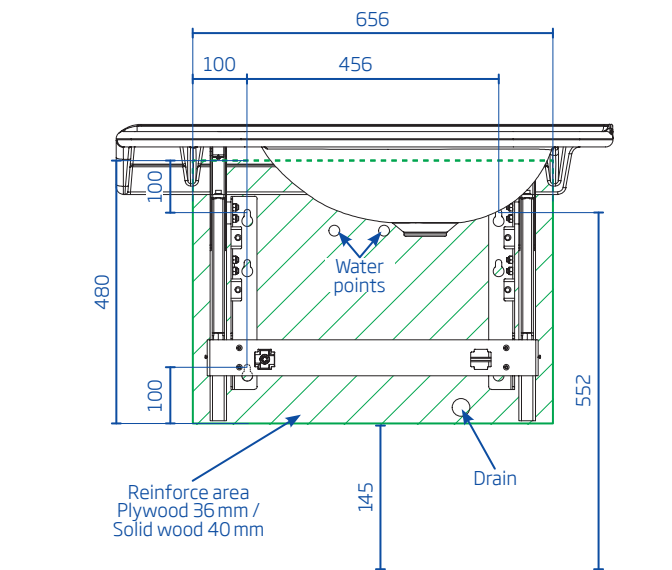

Water and drain places, frame installation measures

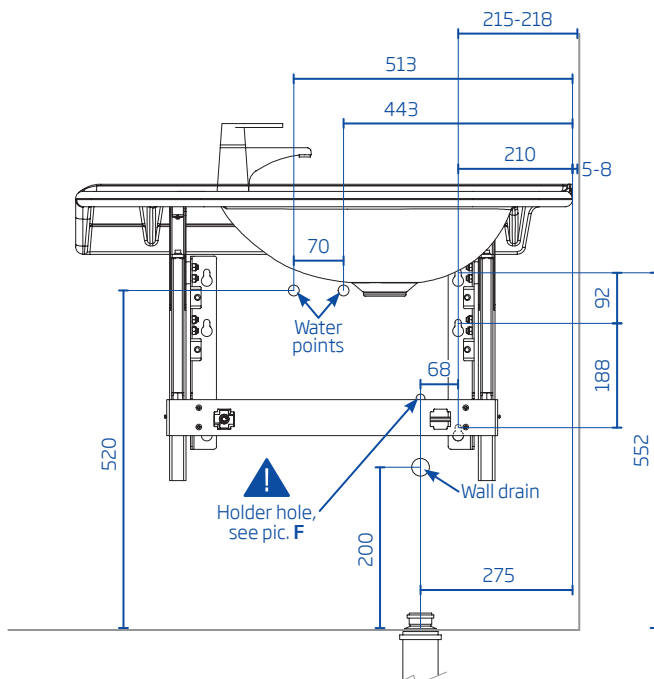


Water and drain pipes

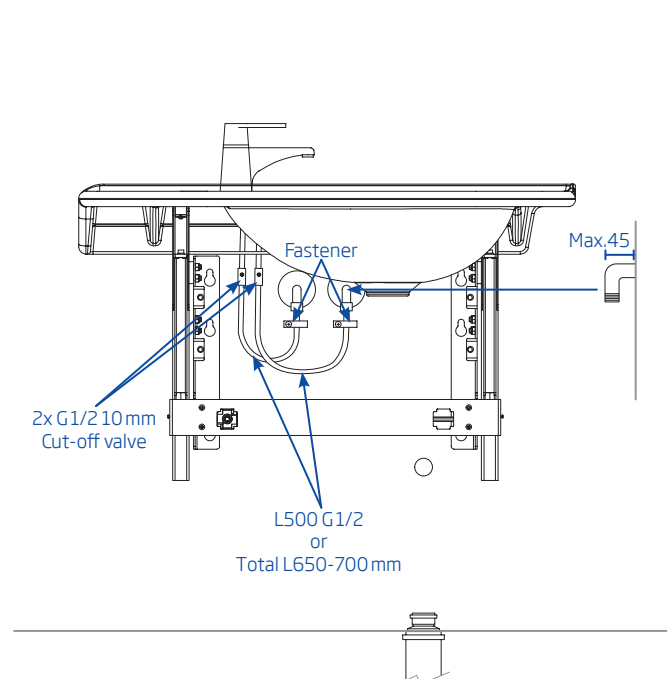


The installer must be a professional.


A

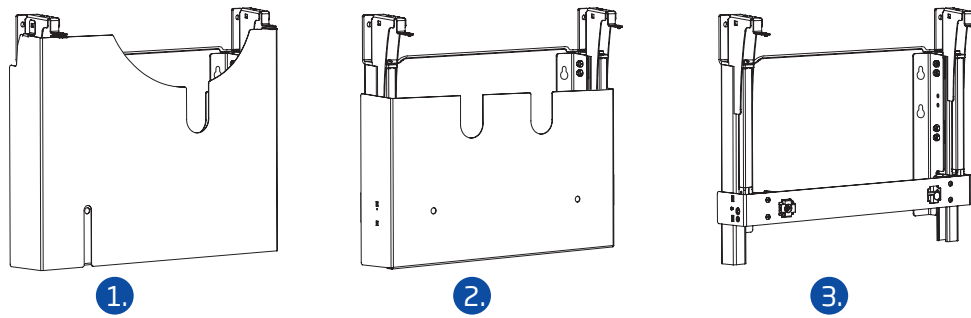

A1


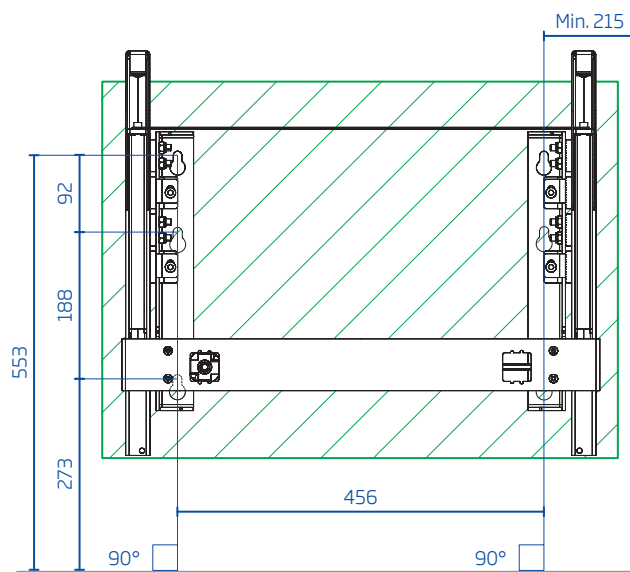


A2



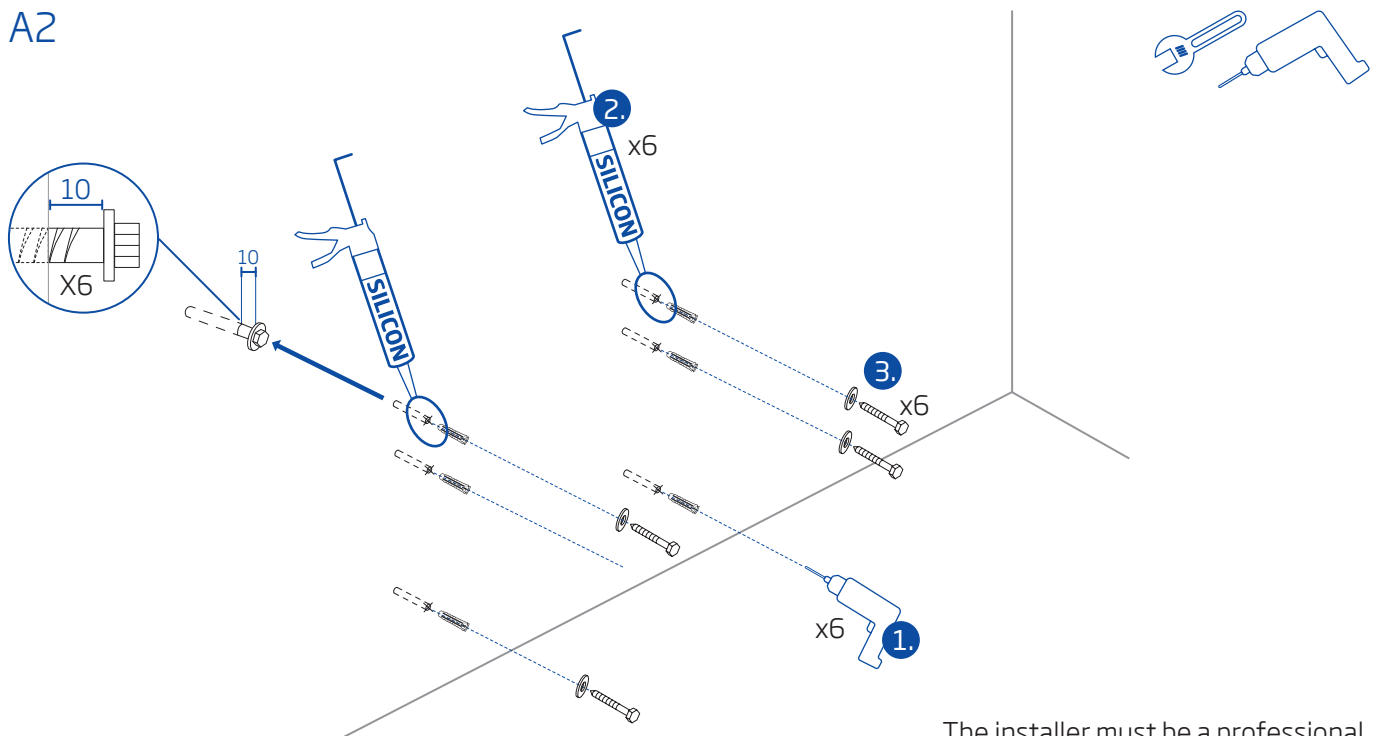


The installer must be a professional.

B1

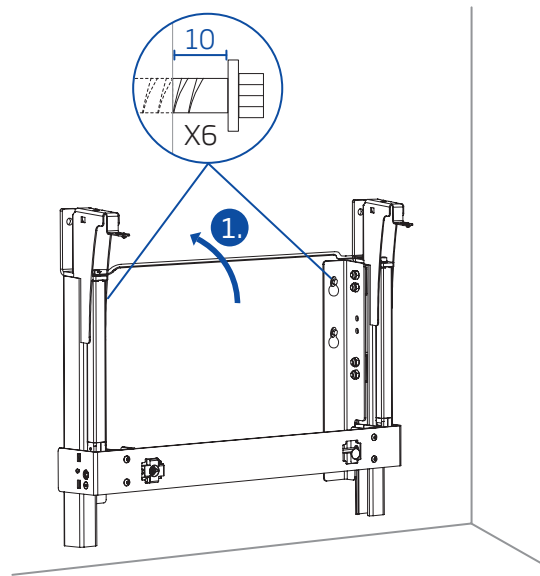
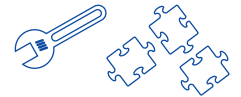


B2

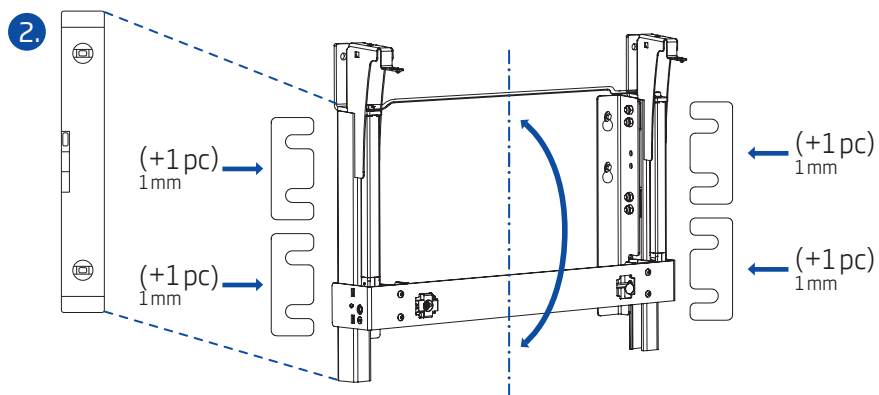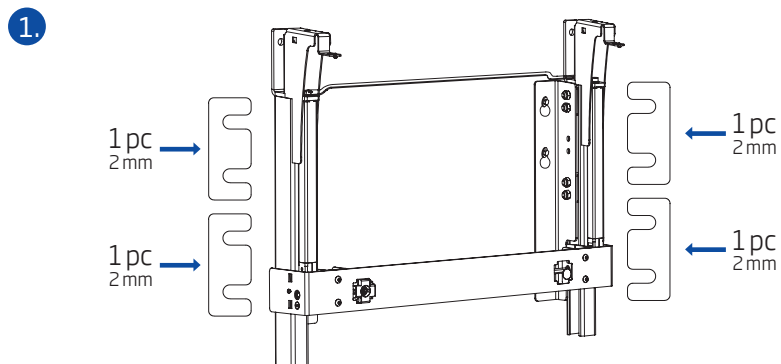
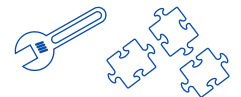


The installer must be a professional.

B3

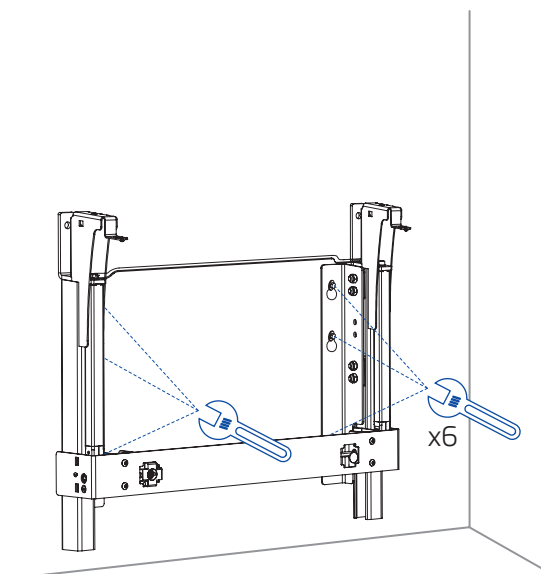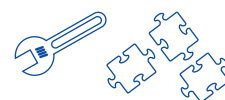

C

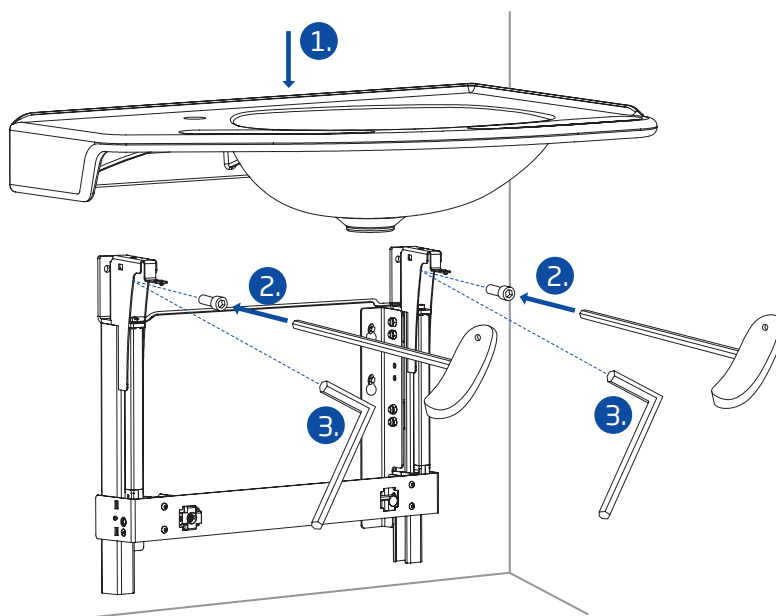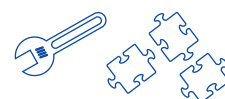


The installer must be a professional.



D



Testing


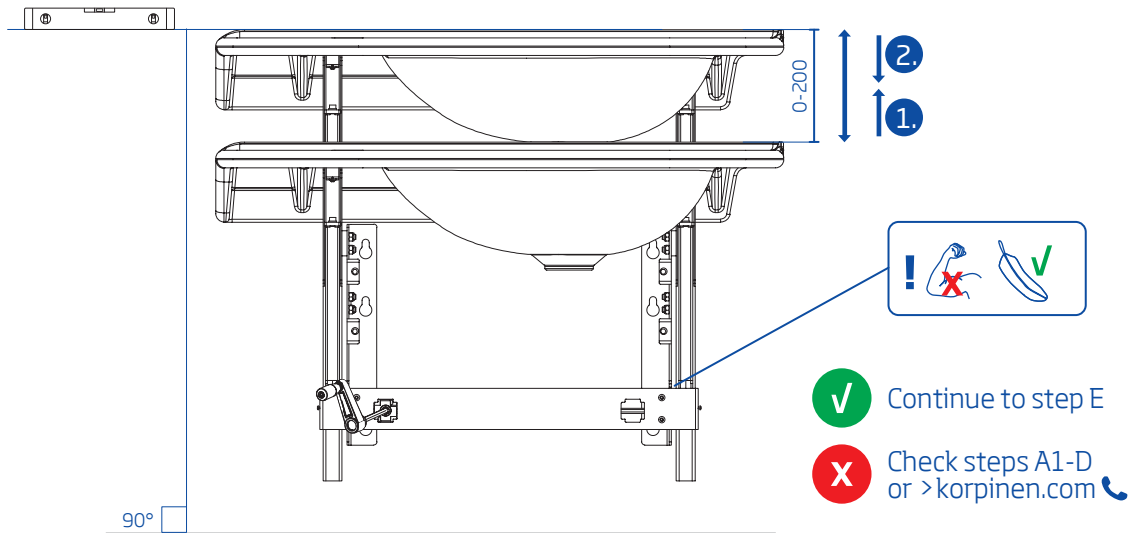


E

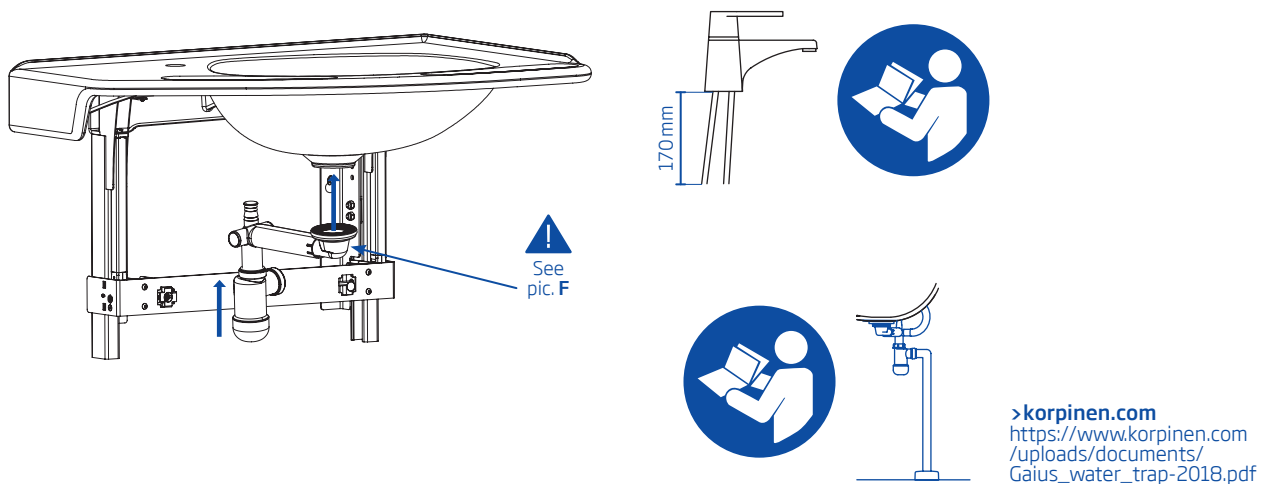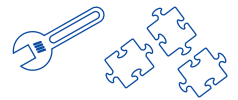



The installer must be a professional.

F

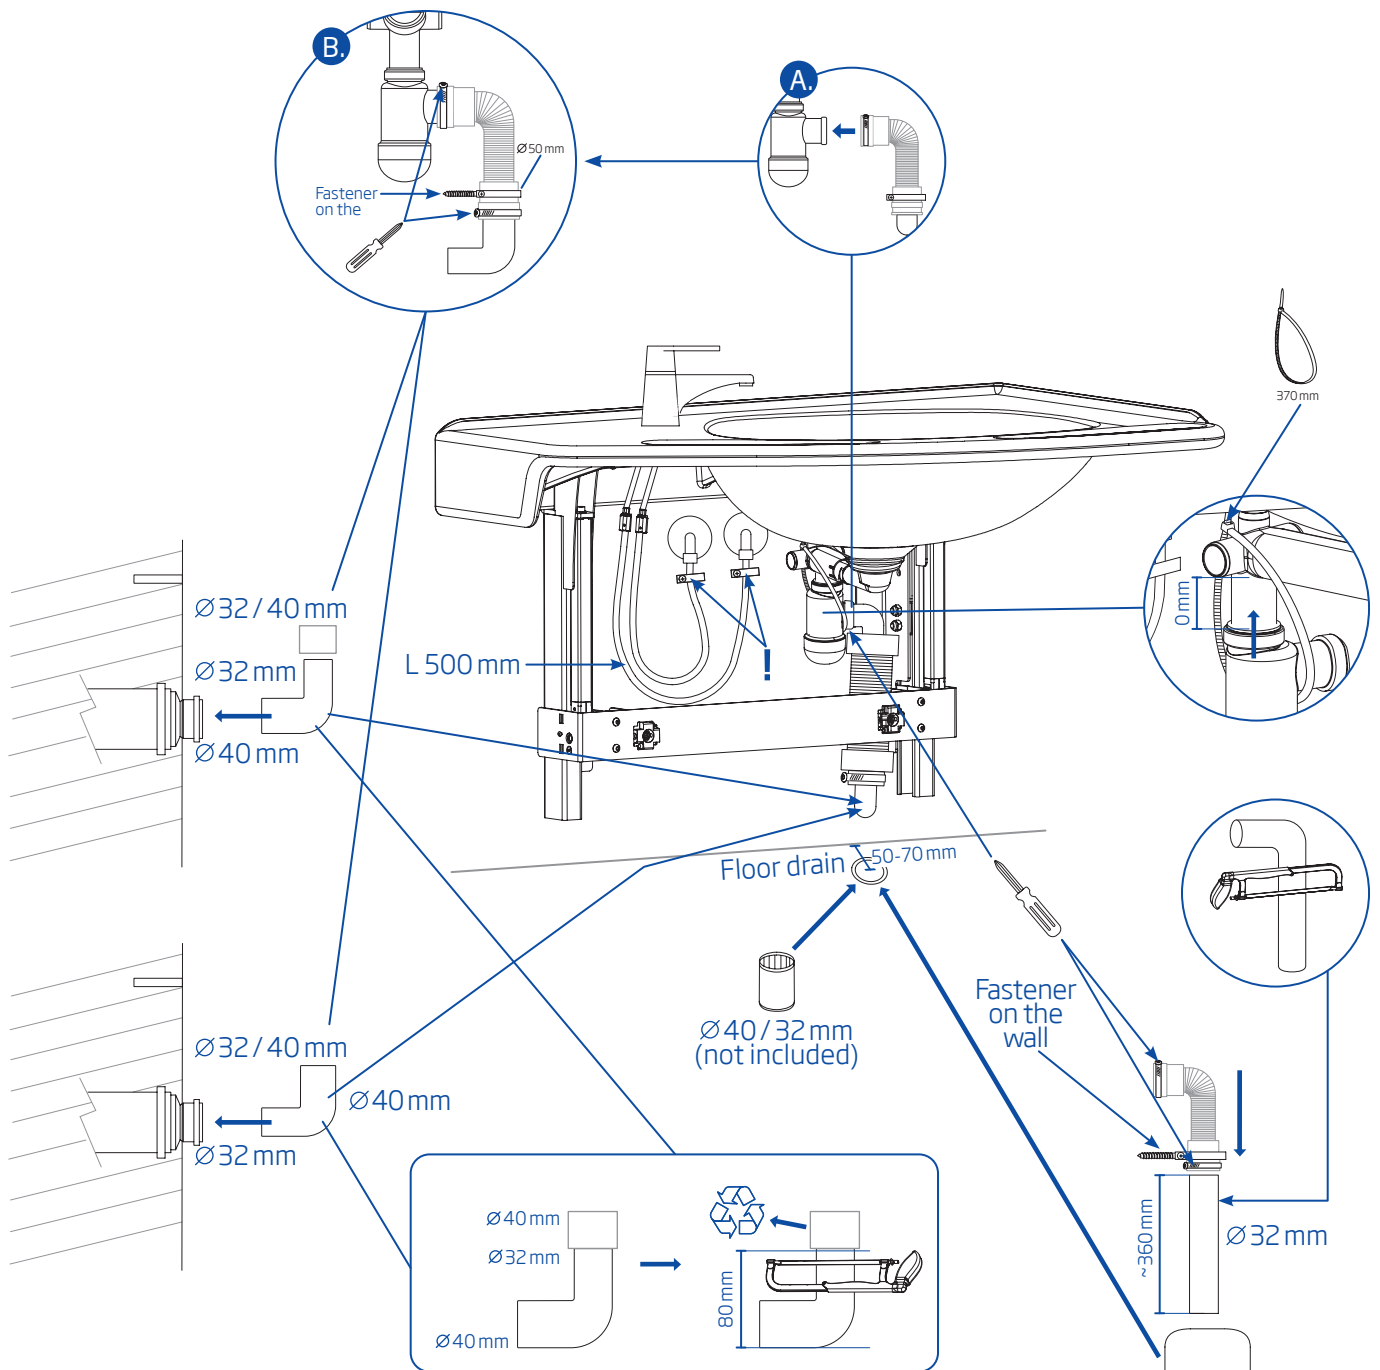
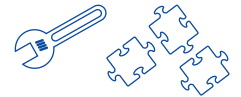


The installer must be a professional.

G1

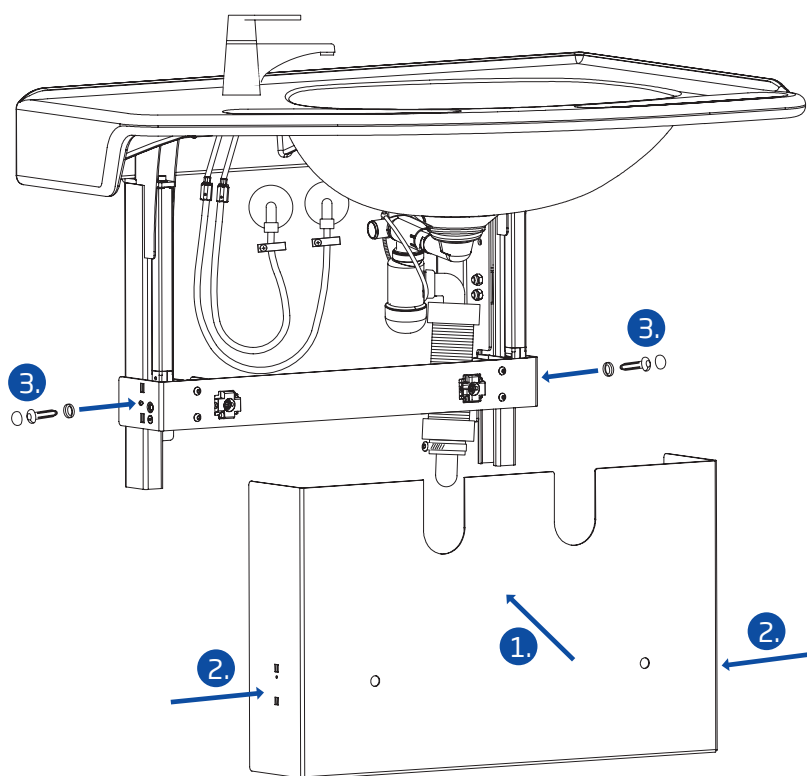
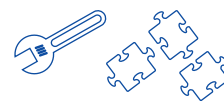


G2

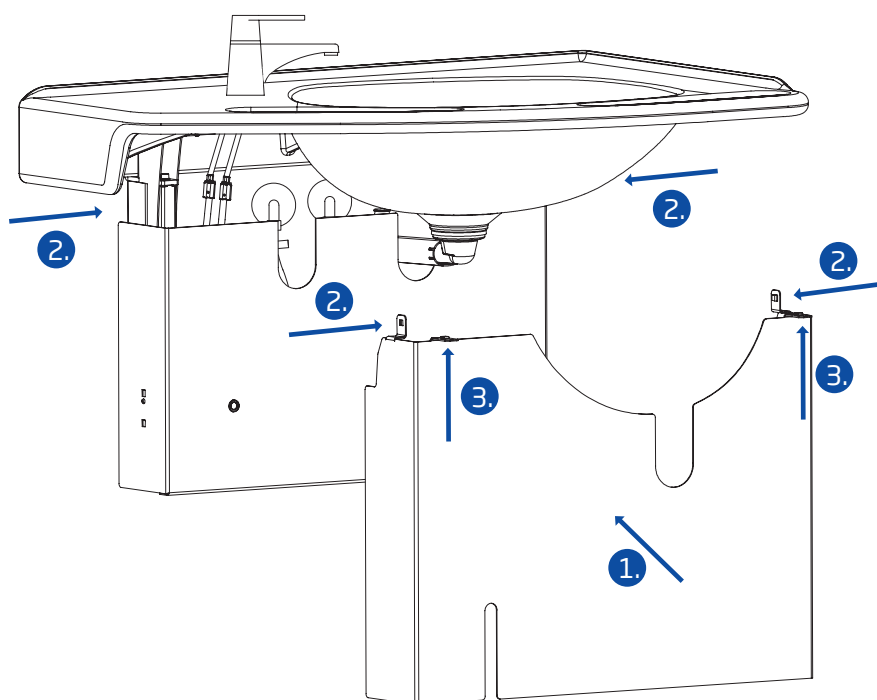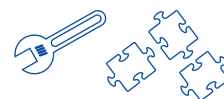


The installer must be a professional.

G3

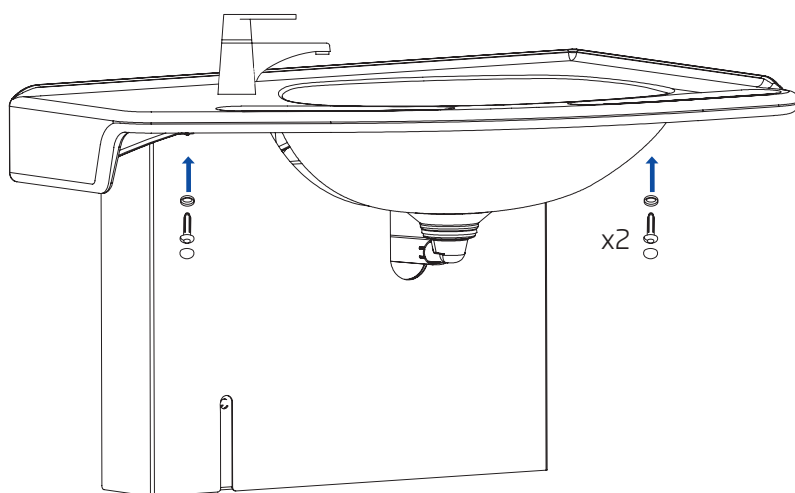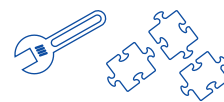

G4

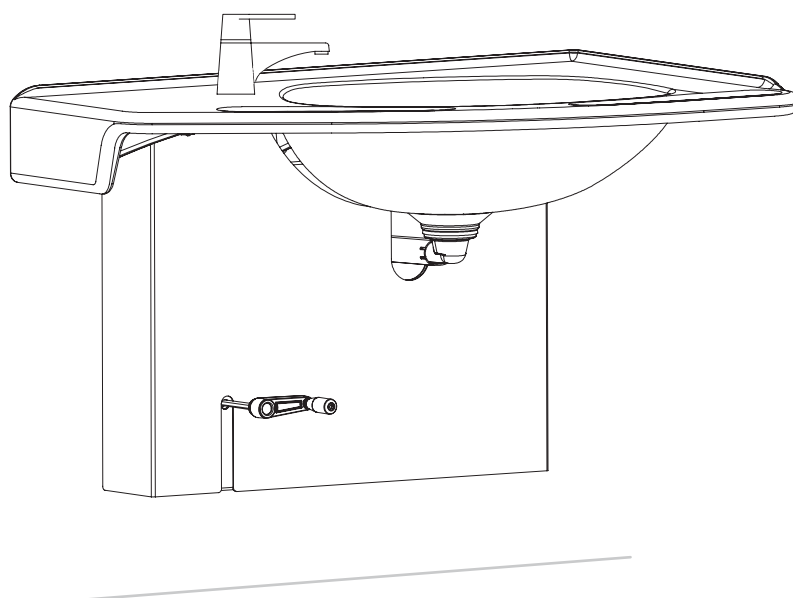

The installer must be a professional.