

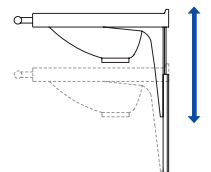
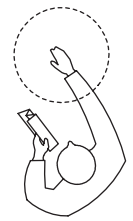






Sense basin with crank

6243.4R

INSTALLATION INSTRUCTIONS

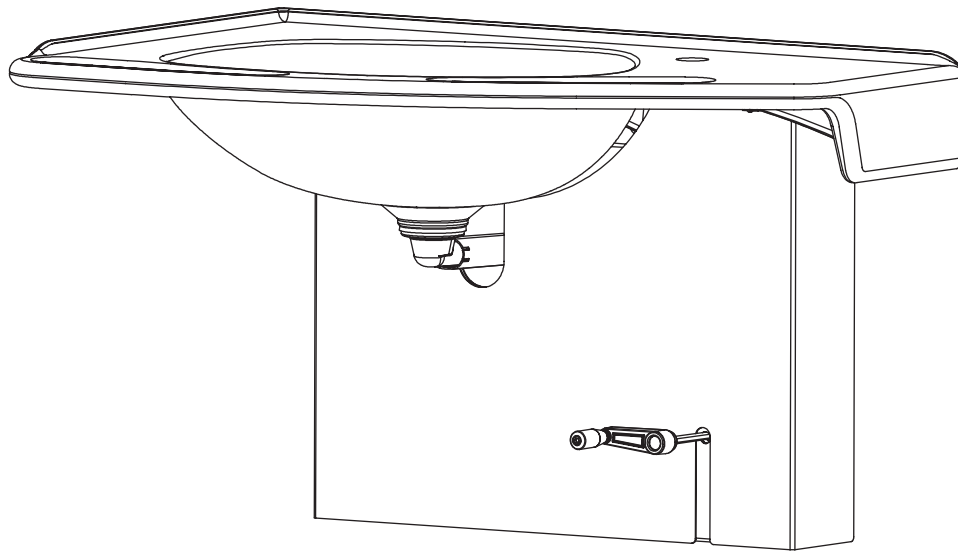


(Basin not included)

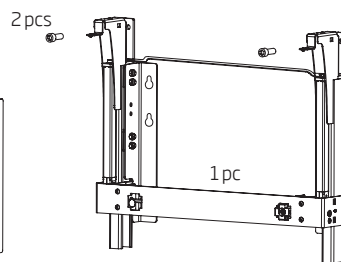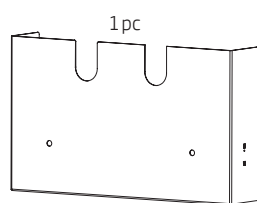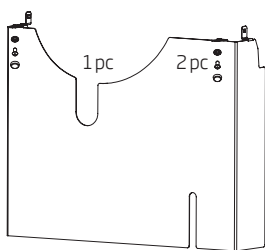

Tap




Oras Medipro
5510A
5510B




> korpinen.com

13970

Cut-off valve 10mm x G1/2
Fastener

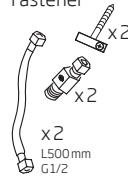

x2
L500mm
G1/2



> korpinen.com

6208-Z



x6
x6
x6
8x60mm



> korpinen.com

13983



x1
Ø50mm




> korpinen.com

13982



x1

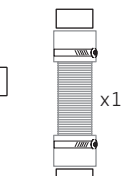


x1




> korpinen.com

The installer must be a professional.


Outfit

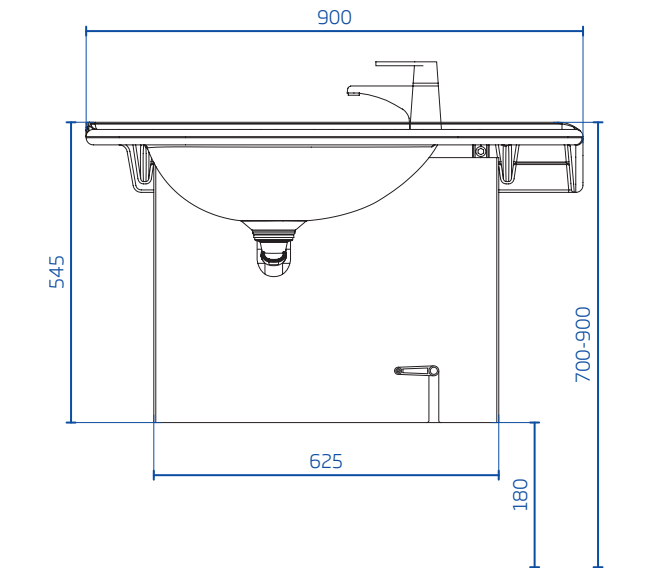


Reinforce area

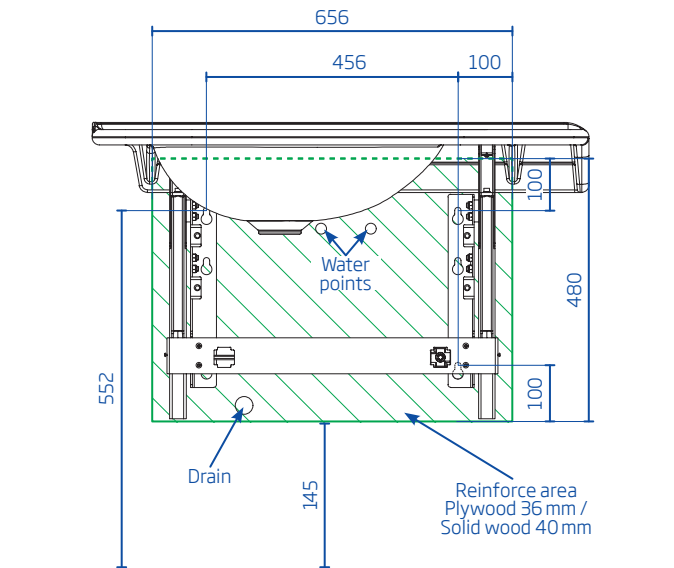

Water and drain places,
frame installation measures

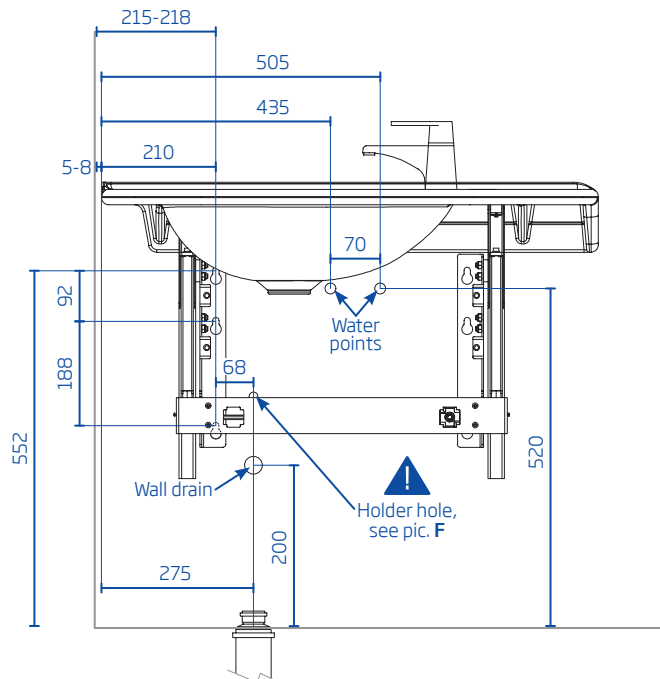


Water and drain pipes

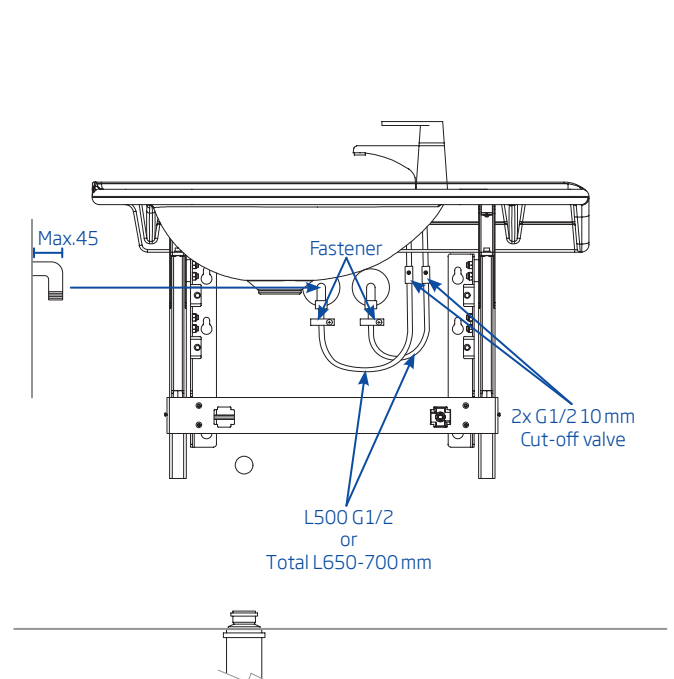


The installer must be a professional.


A

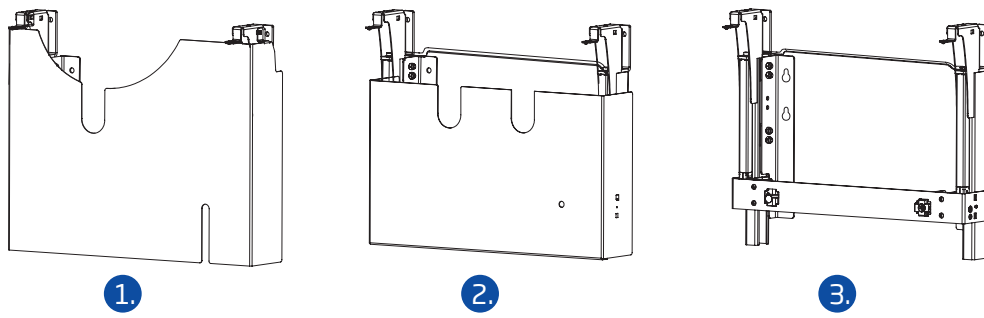

A1


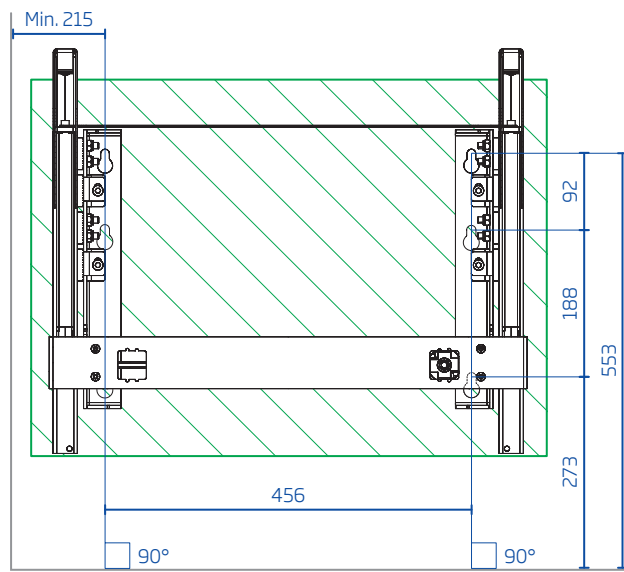


A2



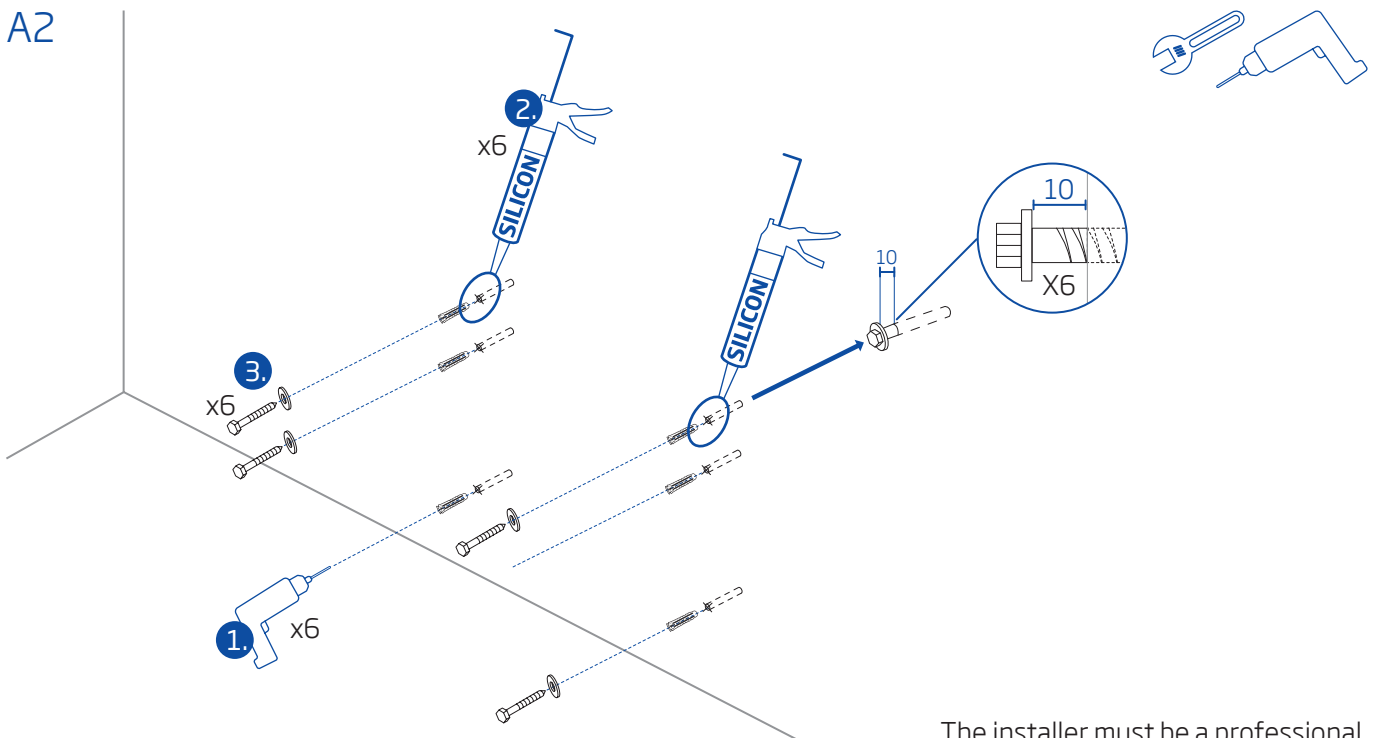


The installer must be a professional.

B1

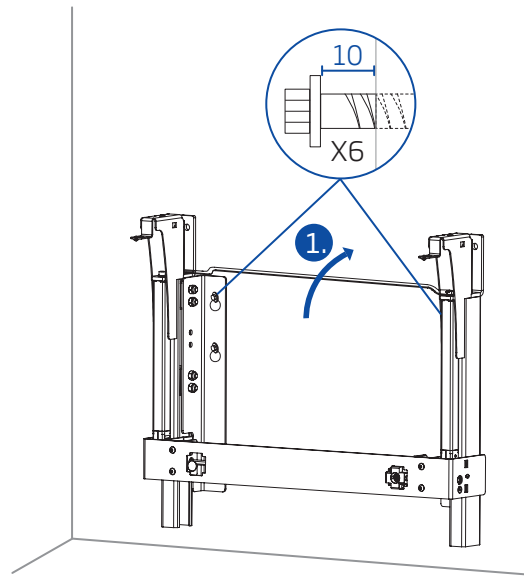



B2

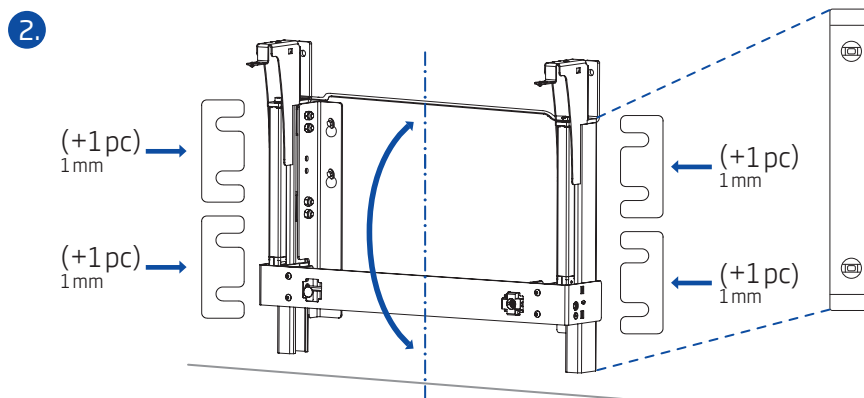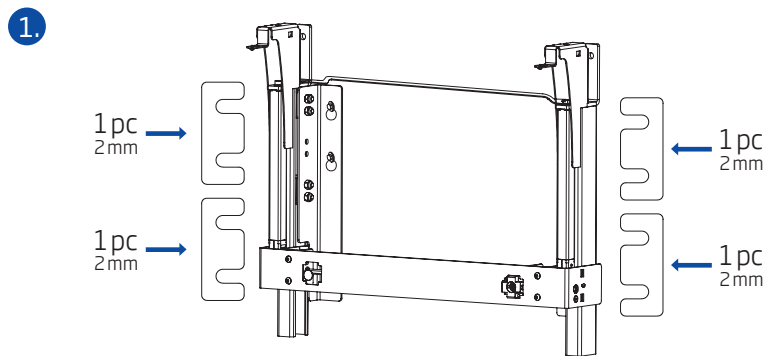



The installer must be a professional.

B3

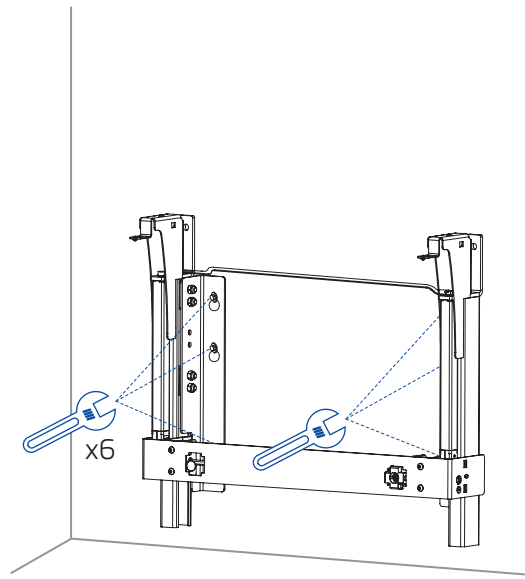

C

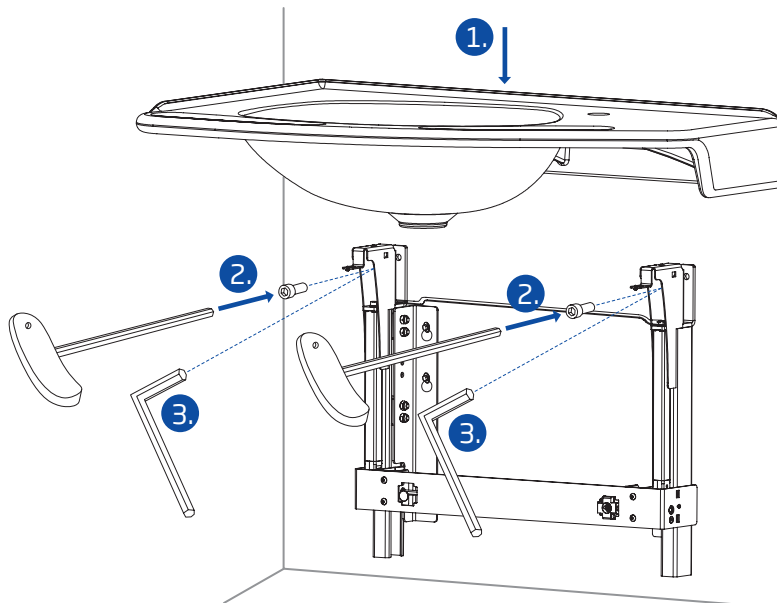


The installer must be a professional.





D



Testing

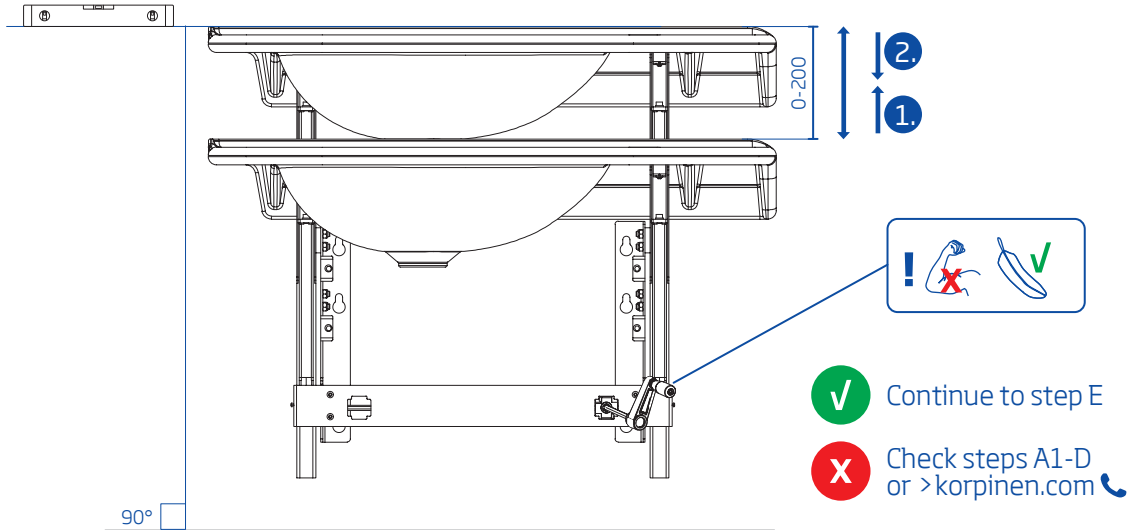



E

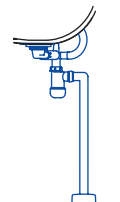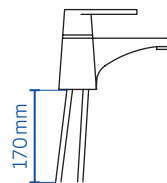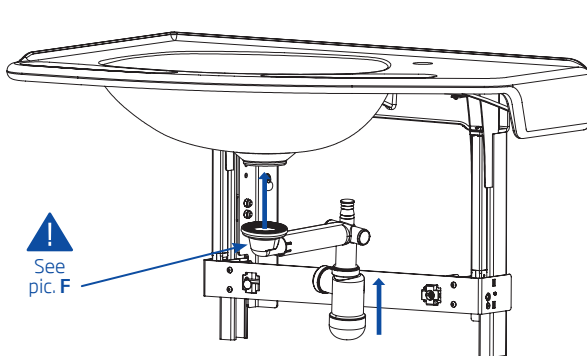

>korpinen.com
https://www.korpinen.com/uploads/documents/Gaius_water_trap-2018.pdf



The installer must be a professional.

F

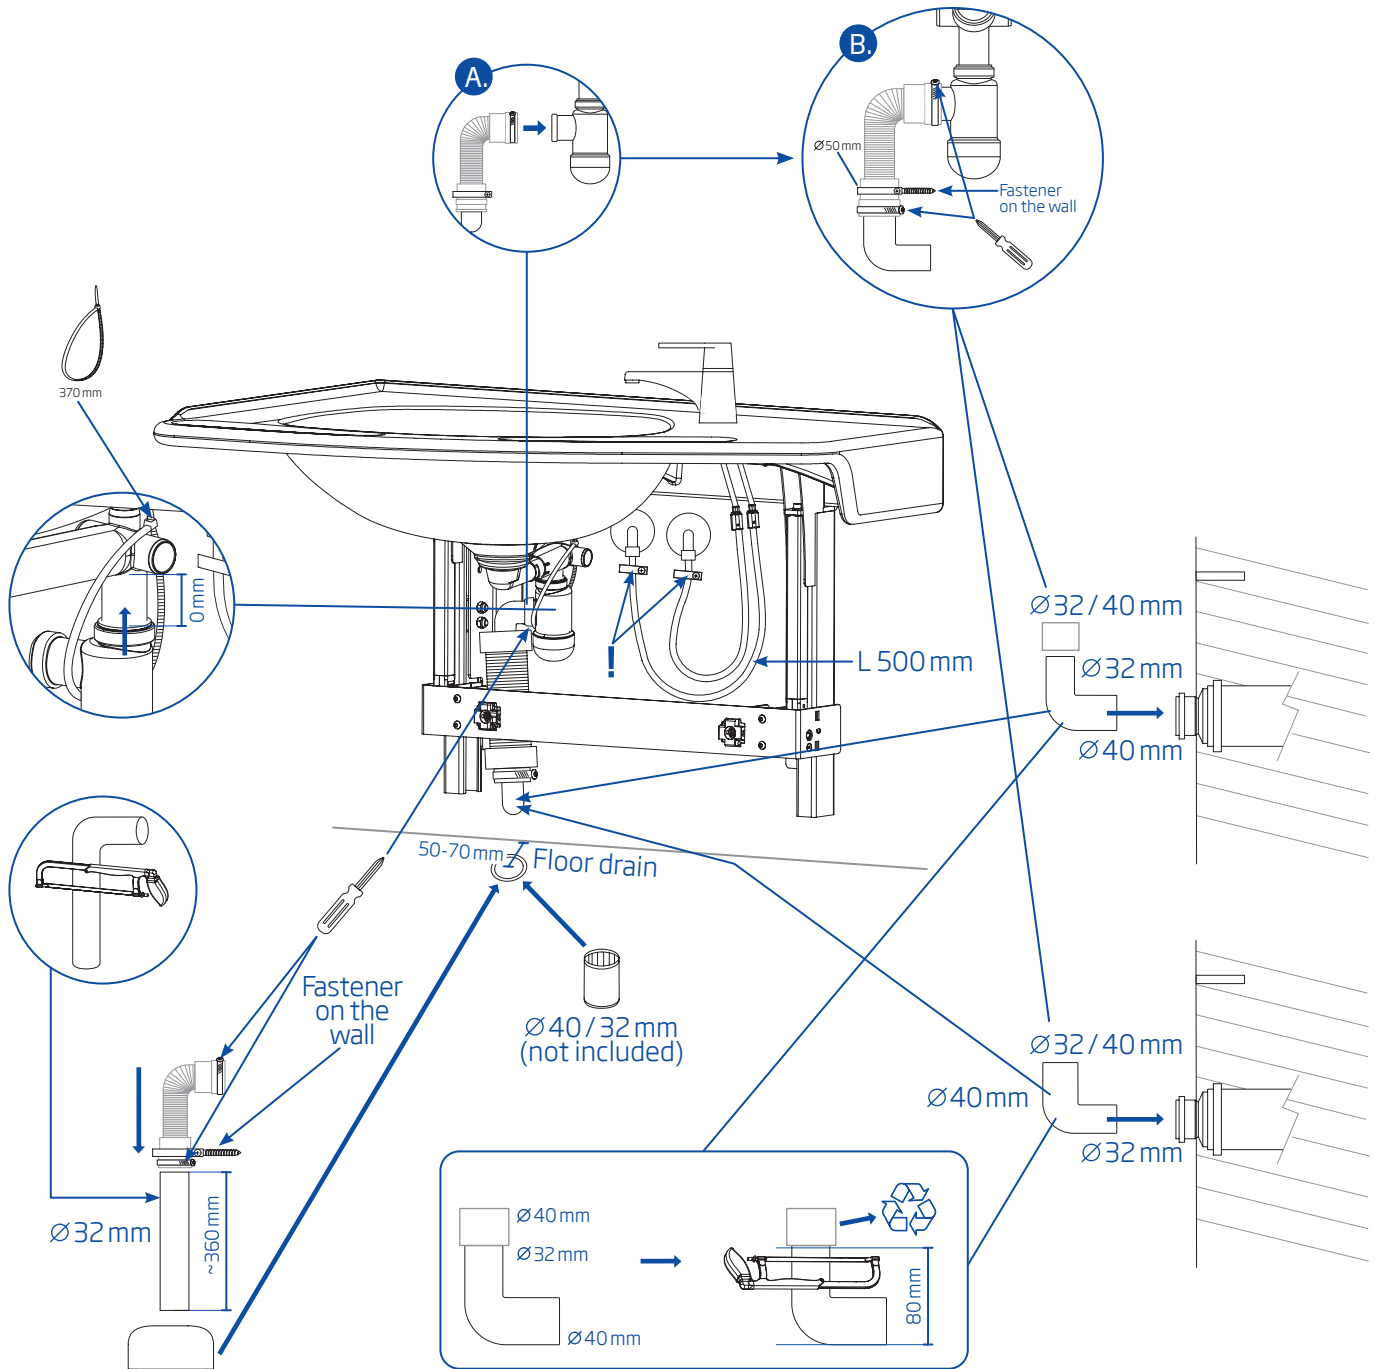



The installer must be a professional.

G1

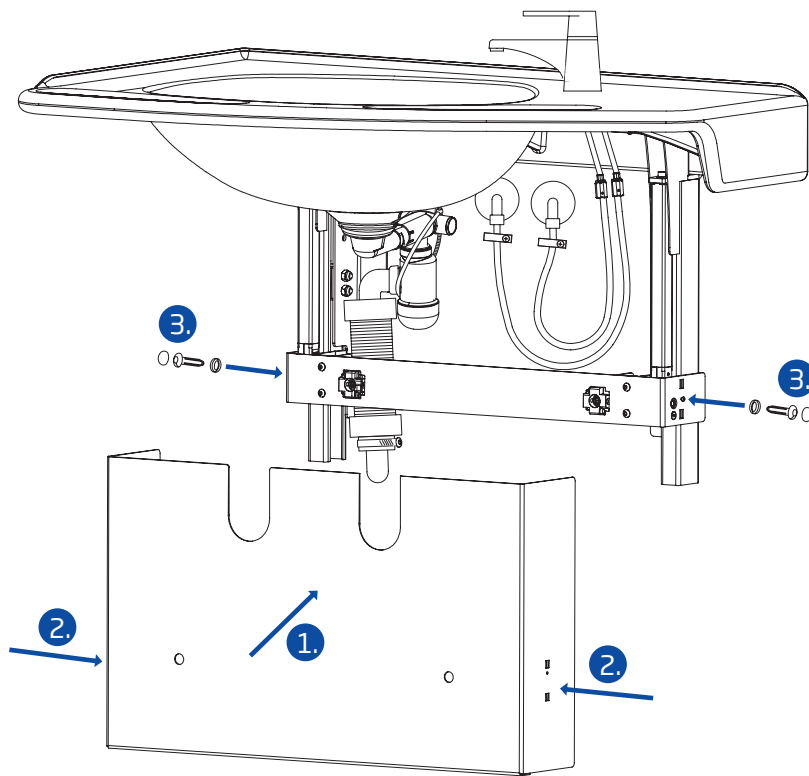



G2

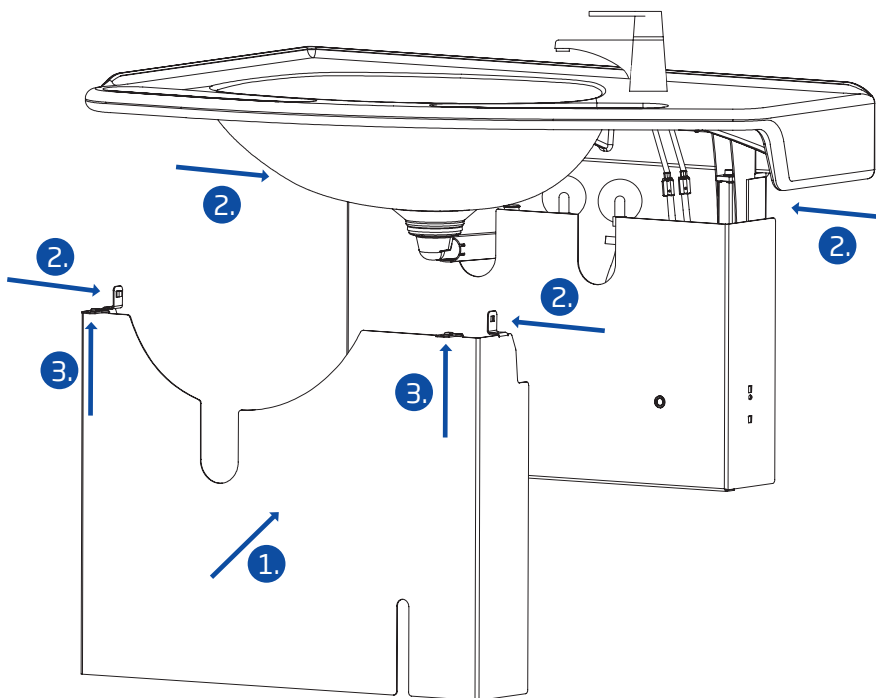


The installer must be a professional.

G3

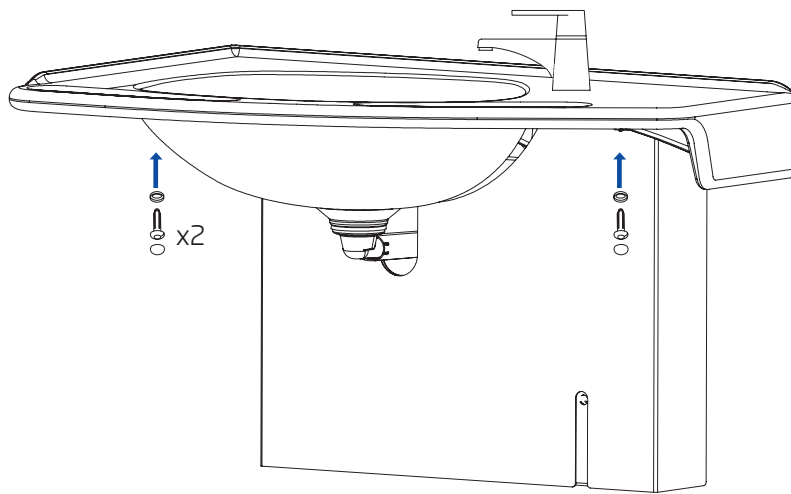

G4

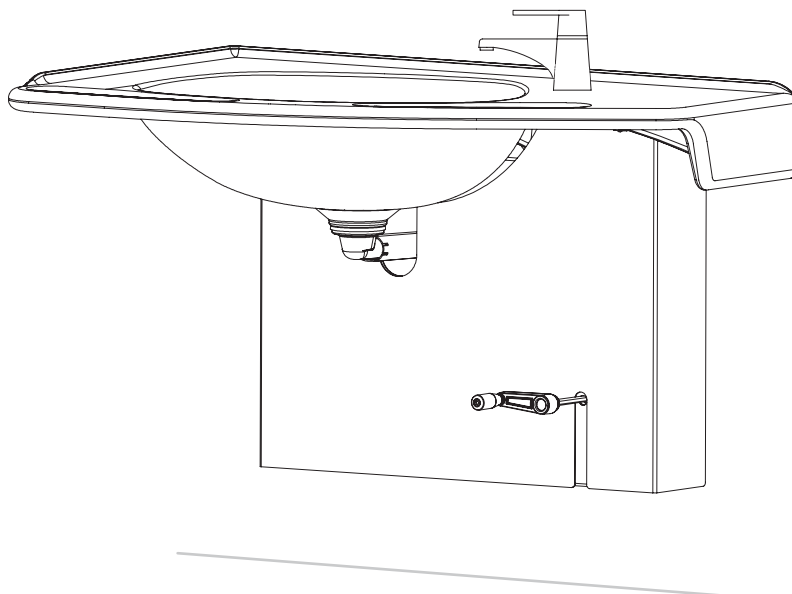

The installer must be a professional.