


Sense shower seats

Reserve installation instruction

800041
800042

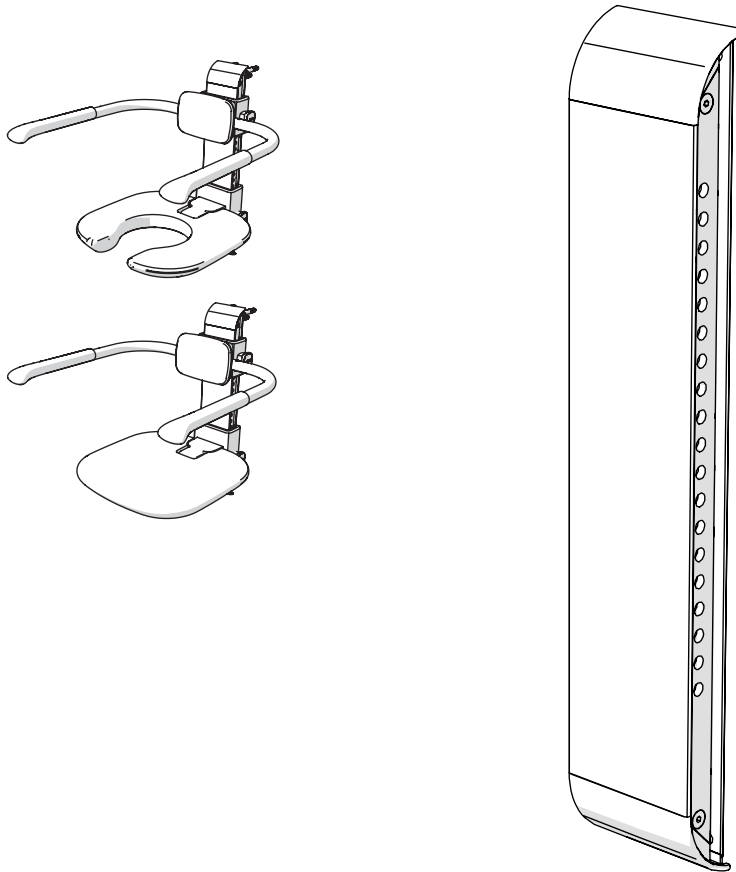


800041
800042


2x

6219-Z


- x6
- x6
- x6
8x60 mm

> korpinen.com

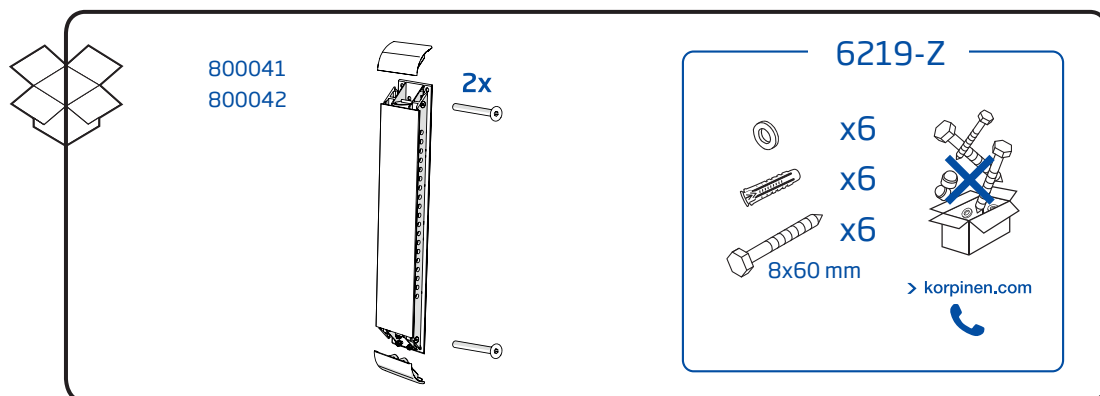


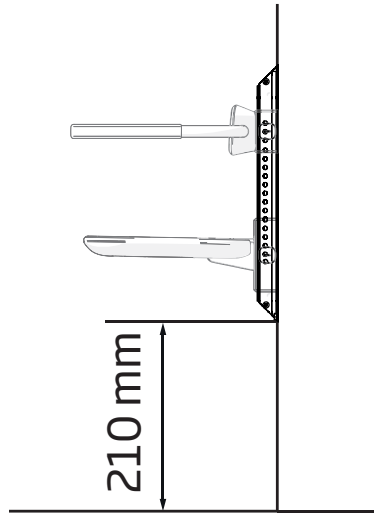



A

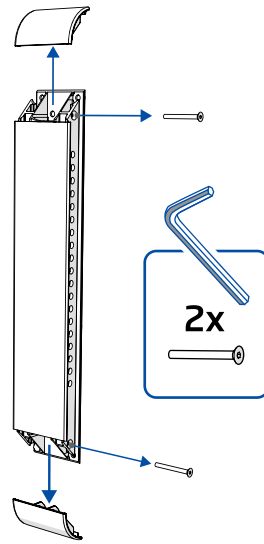


B

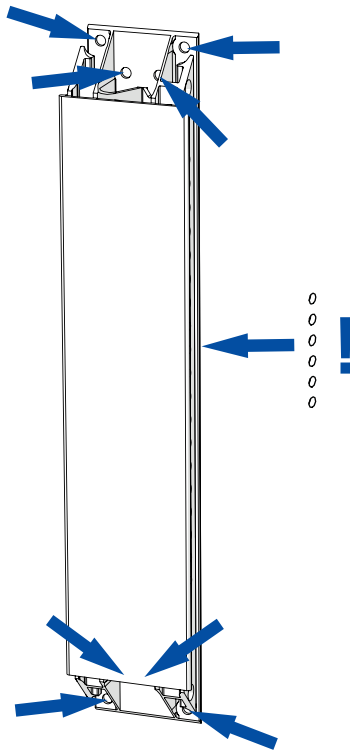

C

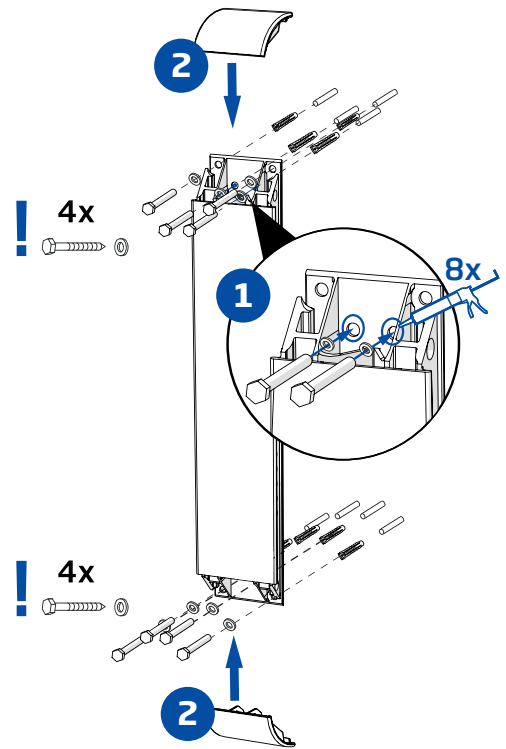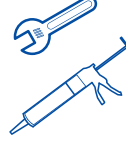

D

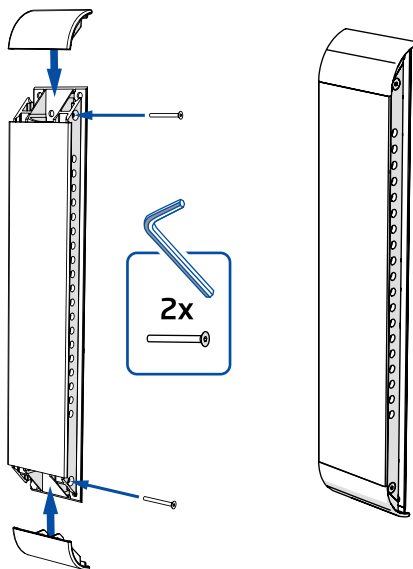

EXTRA STRENGTHEN

